

# Moonroof

## Electrical Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Clutch out of adjustment, foreign matter stuck between guide rail and moonroof, or outer cable not attached properly	Blown No. 51 (30A) fuse (In the under-hood fuse/relay box)	Blown No. 23 (7.5A) fuse (In the under-dash fuse/relay box)	Function test	Open relay	Close relay	Moonroof motor	Moonroof switch	Poor ground	Open circuit, loose or disconnected terminals
Symptom											
Moonroof does not move, but motor runs.		1									
Moonroof does not move and motor does not run (moonroof can be moved with moonroof wrench).	With both switches		1	2	3			5	4	G301, G302, G303 or G252, (G251 or G252 '91-92)	GRN/WHT, YEL/GRN YEL, or RED
	With OPEN switch					1	2		3		YEL/BLU
	With CLOSE switch					2	1		3		YEL/RED