
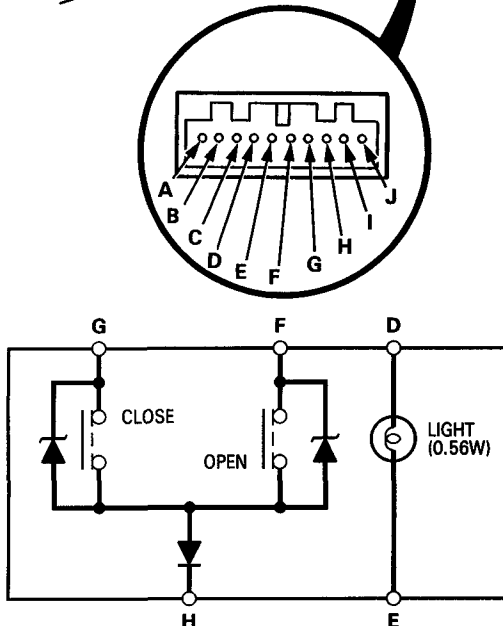


Moonroof

Switch Test

1. Remove the dashboard lower cover (see page [23-79](#)).
2. Remove the instrument panel from the dashboard (see page [23-132](#)).
3. Check for continuity between the terminals in each switch position, according to the table.

Terminal Position	D	E	F	G				H
OFF								
OPEN	○	⊕	○	○	→	→	→	○
CLOSE				○	→	→	→	○

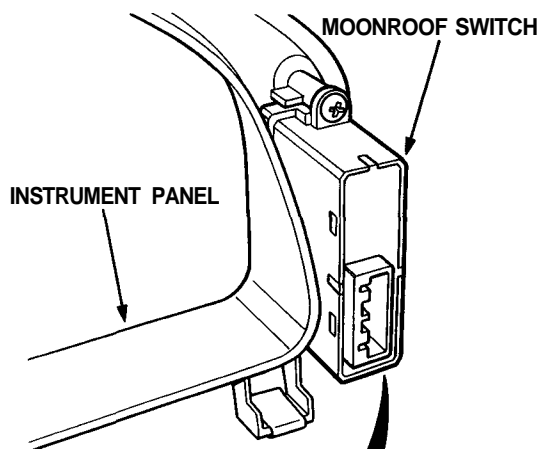


Motor Test

1. Remove the headliner (see [section 20](#)).
2. Disconnect the 2-P connector from the moonroof motor.
3. Test the motor by connecting power and ground to the No. 1 and No.2 terminals according to the table. The motor should run smoothly.

NOTE: Motor clutch test is in [section 20](#).

Terminal Position	1	2
OPEN	⊕	⊖
CLOSE	⊖	⊕

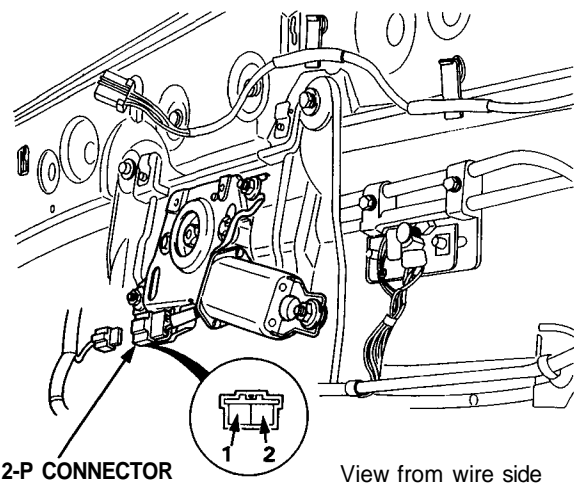

4. If the motor does not run smoothly, replace it.