



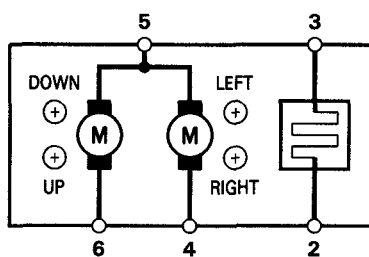

## Power Mirror Motor Test

1. Remove the door panel (see [section 20](#)) and all connectors.
2. Disconnect the 8-P connector from the mirror.

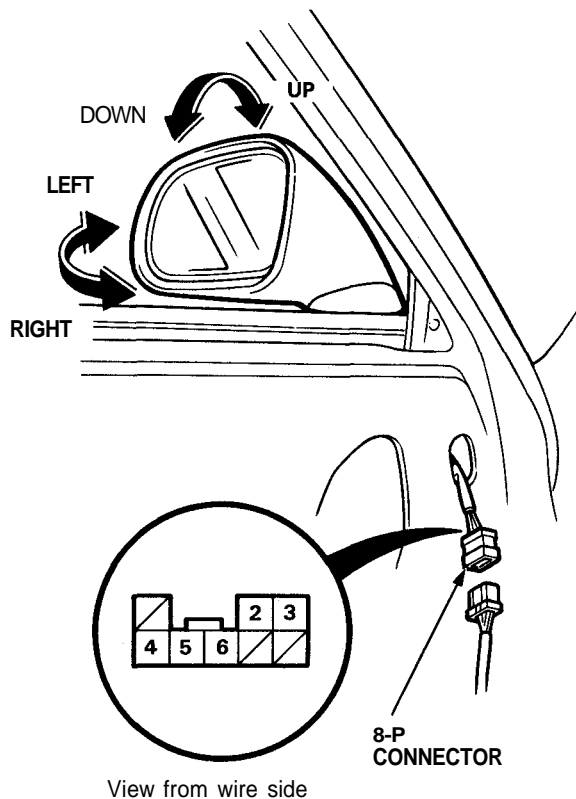

3. Test the actuator in each direction by connecting power and ground according to the table.

### TILT:

Terminal Position	5	6
UP	⊖	⊕
DOWN	⊕	⊖

### SWING:

Terminal Position	4	5
LEFT	⊖	⊕
RIGHT	⊕	⊖

4. Check for continuity between the terminals according to the table.

### Defogger:

2	3
○	○