




Power Windows


Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

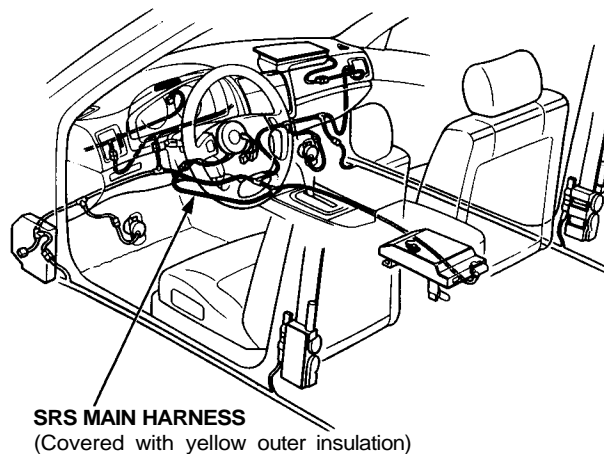

**UNDER-DASH
FUSE/RELAY
BOX**

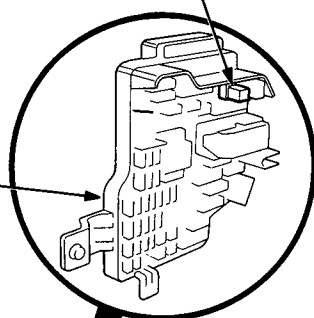

RIGHT FRONT SWITCH
Test, page 23-265
Replacement, 23-262

RIGHT FRONT WINDOW MOTOR
Test, page 23-266
Replacement, section 20

RIGHT REAR SWITCH
Test, page 23-265
Replacement, 23-263

RIGHT REAR WINDOW MOTOR
Test, page 23-266
Replacement, section 20

**POWER WINDOW
MASTER SWITCH**
Input Test, page 23-260
Test, page 23-264
Replacement, page 23-262

**DRIVER'S WINDOW
MOTOR**
Test, page 23-265
Replacement, section 20

LEFT REAR SWITCH
Test, page 23-265
Replacement, page 23-263

LEFT REAR WINDOW MOTOR
Test, page 23-266
Replacement, section 20

Description

Power Window Key-off Timer Operation:

The power windows can still be operated for about 10 minutes after the ignition switch is turned from the "II" to the "I" or "0" position as long as neither of the front doors has been opened. This provides a convenience to parked occupants while offering a degree of security against unwanted or accidental window operation.