



# Power Windows

## Master Switch Replacement

1. Remove the driver's door panel (see [section 20](#)), then disconnect all of the connectors from the door panel.
2. Remove the switch from the door panel by removing the screws and the retainer.

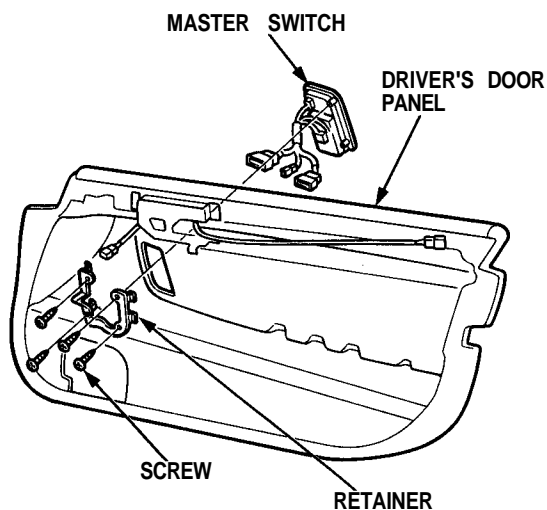


3. Remove the master switch from the switch panel by removing the screws.

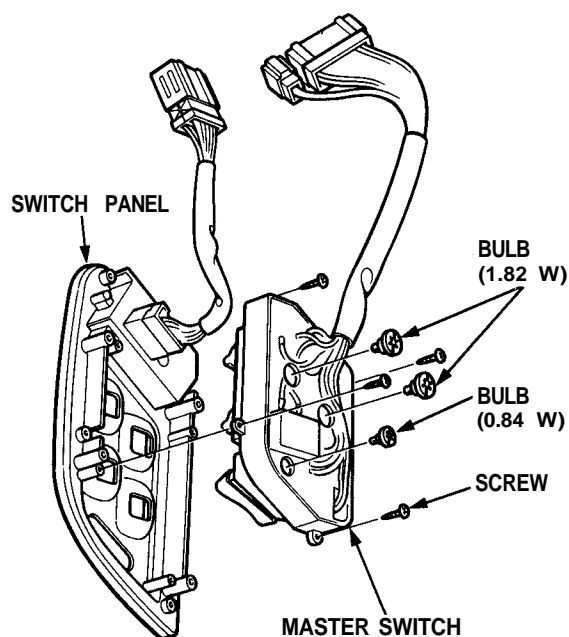


## Passenger's Switch Replacement

### Right Front Switch:

1. Remove the right front door panel (see [section 20](#)), then disconnect all of the connectors from the door panel.
2. Remove the switch from the door panel by removing the screws and retainer.

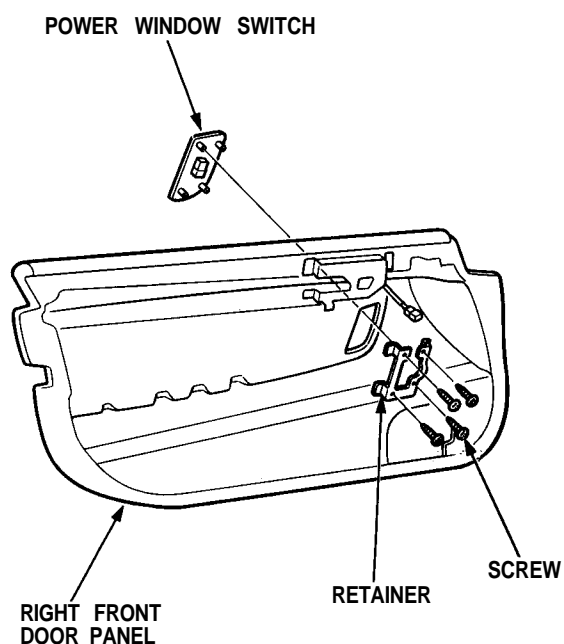

3. Remove the power window switch from the switch panel by removing the two screws.

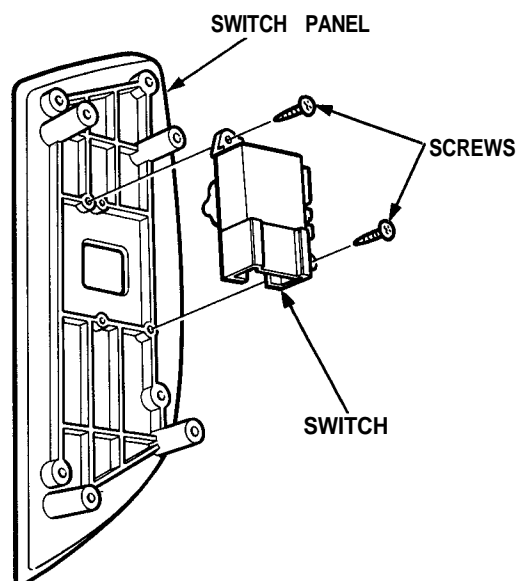





#### Rear Switches:

##### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-409](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

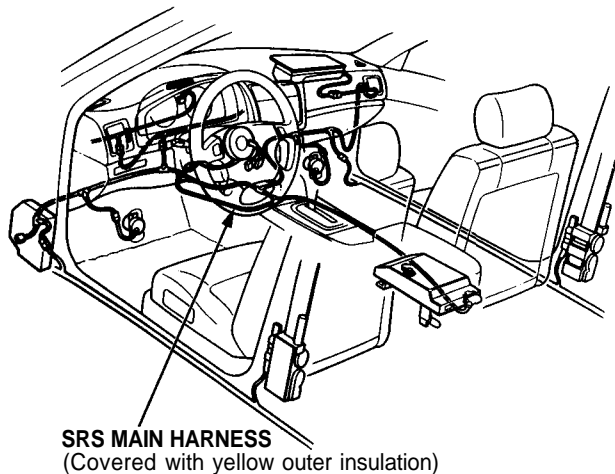

1. Remove the rear seat, then remove the quarter trim panel (see [section 20](#)).

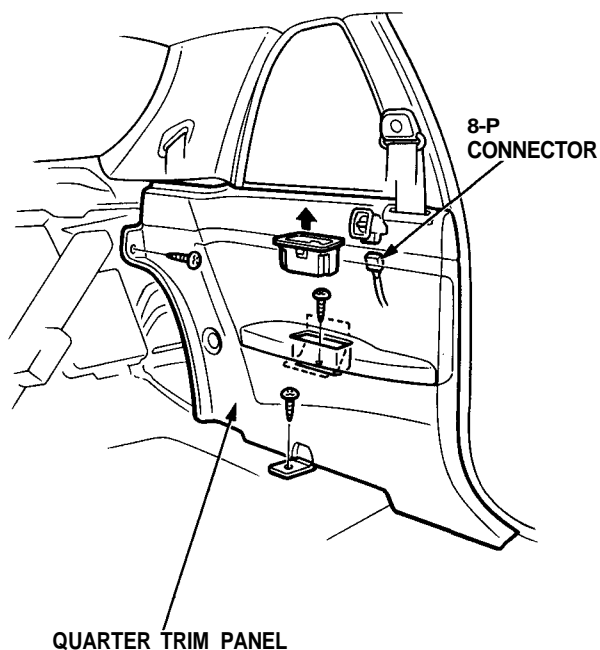

2. Remove the switch from the quarter trim panel by removing the two screws and retainer.

