


# Power Windows

## Master Switch Test

- 1. Remove the door panel (see [section 20](#)).
- 2. Remove the master switch from the switch panel.
- 3. Check for continuity between the terminals in each switch position according to the tables.

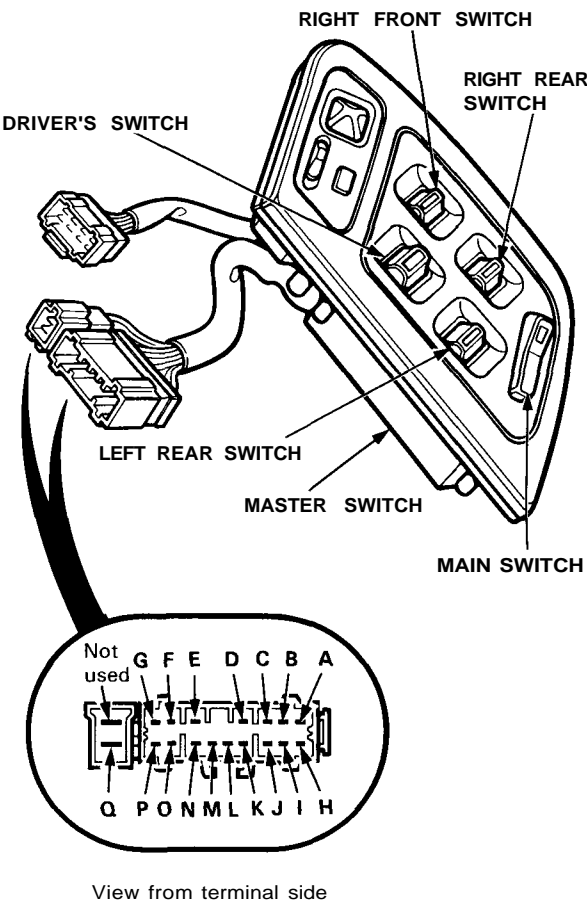

### Driver's Switch

The driver's switch is combined with the control unit so you cannot isolate the switch to test it. Instead, run the master switch input test procedures No. 1, 2, 3, and 7 on page [23-261](#). If the tests are normal, the driver's switch must be faulty.

### Right Front Switch:

Terminal		C	G	P	Q
Position	Main switch				
OFF	ON		○	○	○
	OFF		○	○	
UP	ON	○	○	○	
	OFF	○		○	
DOWN	ON	○	○	○	○
	OFF	○	○		

### Right Rear Switch:

Terminal		O	M	N	Q
Position	Main switch				
OFF	ON		○	○	○
	OFF		○	○	
UP	ON	○	○	○	○
	OFF	○	○		
DOWN	ON	○	○		○
	OFF	○		○	

### Left Rear Switch:

Terminal		F	E	D	Q
Position	Main switch				
OFF	ON		○	○	○
	OFF		○	○	
UP	ON	○	○		○
	OFF	○		○	
DOWN	ON	○	○	○	○
	OFF	○	○		

### Switch Light:

K		L
○	○	○