




Passenger's Switch Test

1. Remove the switch (see page 23-262 and 263).
2. Check for continuity between the terminals in each switch position according to the table.

Rear Switches:

Terminal Position	B	C	D	F	G
UP		○—○			
OFF		○—○	○—○	○—○	○—○
DOWN	○—○			○—○	○—○


NOTE: Right front switch is shown. Rear switches are similar.

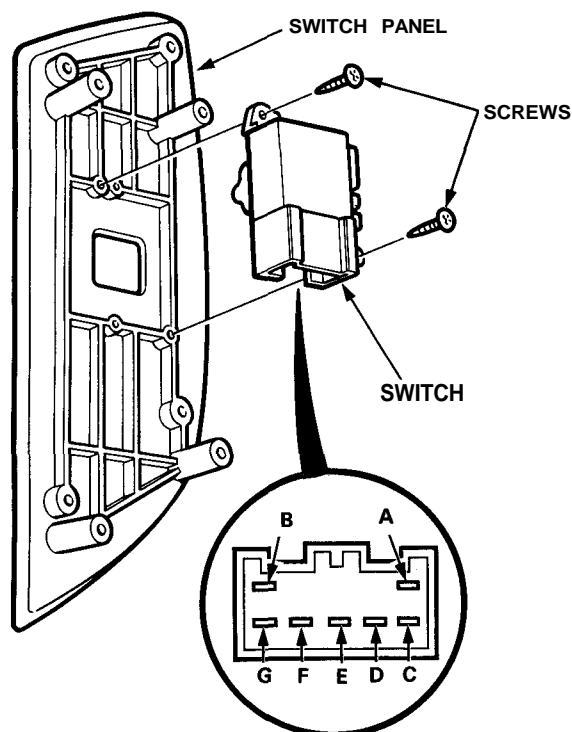

Driver's Window Motor Test

Motor Test:

1. Remove the door panel (see section 20).
2. Disconnect the 4-P connector from the driver's door wire harness.

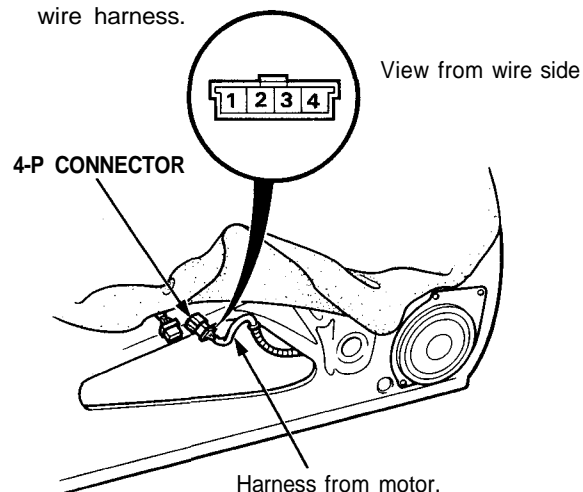

3. Test the motor in each direction by connecting power and ground according to the table.

Terminal Direction	3	4
UP	⊖	⊕
DOWN	⊕	⊖

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run, replace it.

Pulser Test:

Connect the test leads of an analog ohmmeter to the No. 1 and No. 2 terminals, and check for needle movement while running the motor by connecting battery power to the No. 3 and No. 4 terminals. The analog ohmmeter needle should move back and forth alternately.

