

Power Windows

Passenger's Window Motor Test



Front Window Motor:

1. Remove the right front door panel (see [section 20](#)).
2. Disconnect the 2-P connector from the motor.
3. Test the motor in each direction by connecting and ground according to the table.

Terminal	1	2
Direction		
UP	⊖	⊕
DOWN	⊕	⊖

CAUTION: When the motor stops running, disconnect one lead immediately.


4. If the motor does not run, replace it.

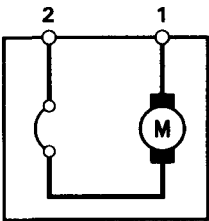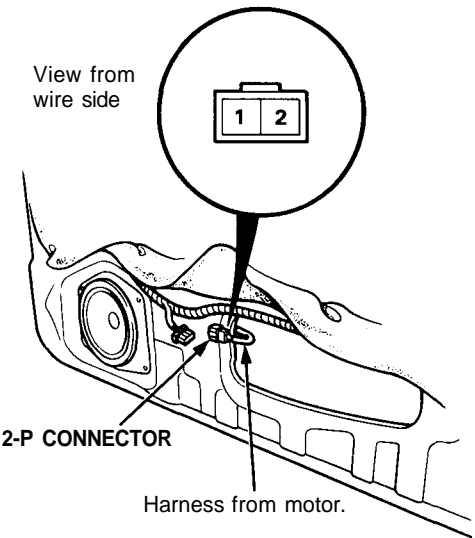

Rear Window Motor:

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see [page 23-409](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

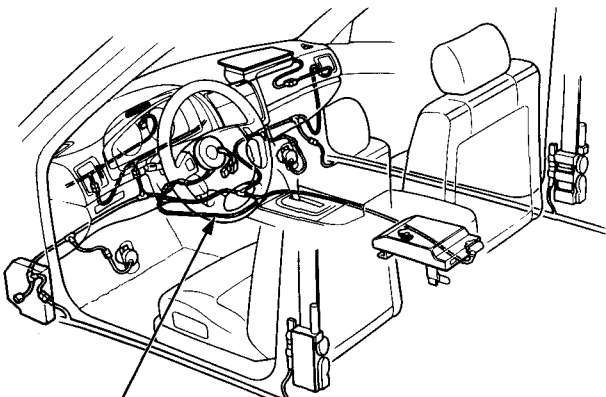

SRS MAIN HARNESS
(Covered with yellow outer insulation)

1. Remove the rear seat, then remove the quarter trim panel (see [section 20](#)).
2. Disconnect the 2-P connector from the motor.
3. Test the motor in each direction by connecting power and ground according to the table.

Terminal	1	2
Direction		
UP	⊖	⊕
DOWN	⊕	⊖

CAUTION: When the motor stops running, disconnect one lead immediately.

4. If the motor does not run, replace it.

NOTE: Left rear motor is shown, right rear motor is similar.

