





Power Door Locks

Component Location Index

CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

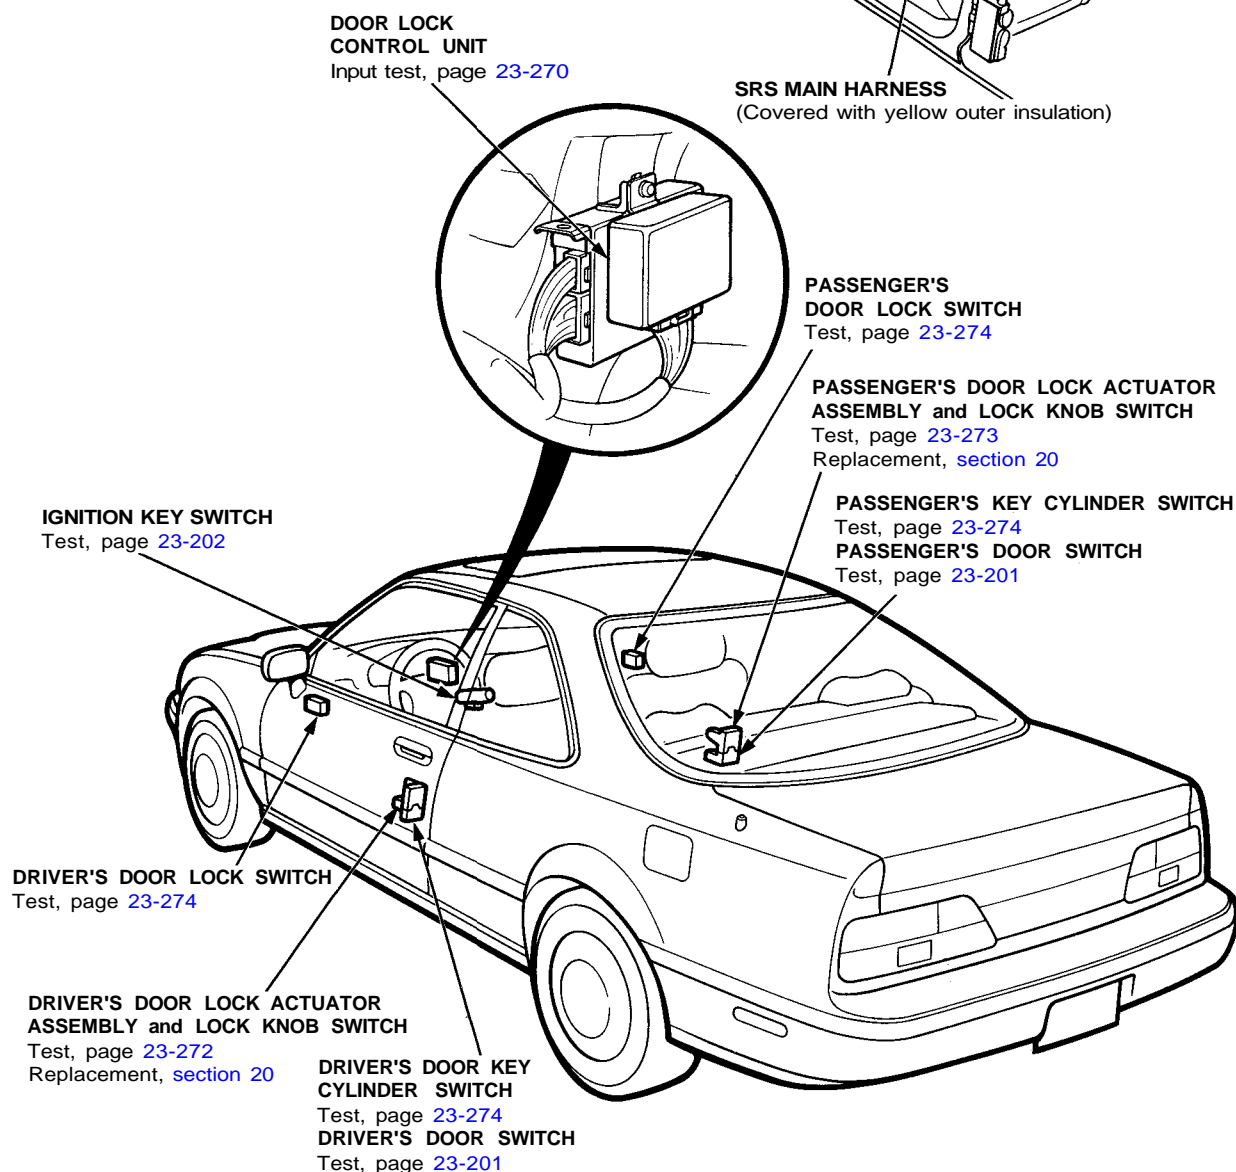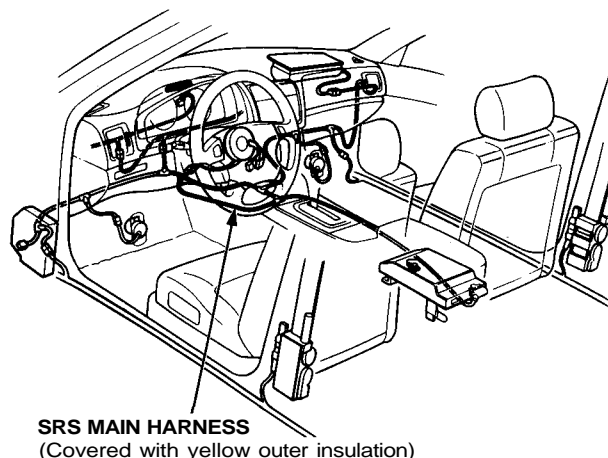

Description

For this model, a new door lock system has been adopted to improve convenience and safety. If the keys is inserted into the driver's door lock key cylinder, turned to the unlock position, and pulled out immediately thereafter, ONLY the driver's door will unlock. However, if the key is kept in the unlock position for one second or more, ALL doors will unlock.