



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 44 (20 A) fuse (In the under-hood fuse/relay box)	Disconnected or obstructed door lock rod/linkage	Driver's door lock knob switch (In the driver's door lock actuator)	Ignition key switch	Driver's door switch	Passenger's door switch	Door lock actuator	Driver's door key cylinder switch	Driver's door lock switch	Passenger's door lock switch	Control unit input	Passenger's door key cylinder switch	Poor ground	Open circuit in wires, loose or disconnected terminals
Symptom															
Power door lock system doesn't work at all.		1										2		G301, G302, G303	WHT/GRN
Doors don't lock or unlock with the driver's door lock switch.	Both doors									1		2		G301, G302, G303	GRN/WHT ¹ or GRN/RED ¹
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't lock or unlock with the passenger's door locks witch.	Both doors										1	2		G301, G302, G303	BLK/WHT or BLK/RED
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't lock or unlock with the driver's door lock knob (ignition key not inserted and doors closed).	Both doors			1								2		G301, G302, G303	GRN/BLK or BLU/WHT ²
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't lock or unlock with the passenger's door key.	Both doors											2	1	G301, G302, G303	GRN/BLU ² or GRN/WHT ²
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't unlock with the driver's door key.	Driver's door		1												
	*Both doors			2					1					G301, G302, G303	GRN/RED ³ or GRN/BLK
The door will lock when the ignition key is inserted and one of the front doors is open.					1	2	3					4		G301, G302, G303	BLU/WHT ¹ GRN/RED ² or GRN/BLU ¹

* If the system is working normally, both doors will unlock when you hold the door key in the unlock position (key cylinder switch and door lock knob switch turned ON) for one second or more.