


Power Door Locks

Driver's Door Lock Actuator Test

- 1. Remove the door panel (see [section 20](#)).
- 2. Disconnect the 8-P connector from the actuator.
- 3. Check actuator operation by connecting power and ground, according to the table.

Terminal		
Position	2	5
LOCK	⊕	⊖
UNLOCK	⊖	⊕

CAUTION: To prevent damage to the motor, apply battery voltage only momentarily.

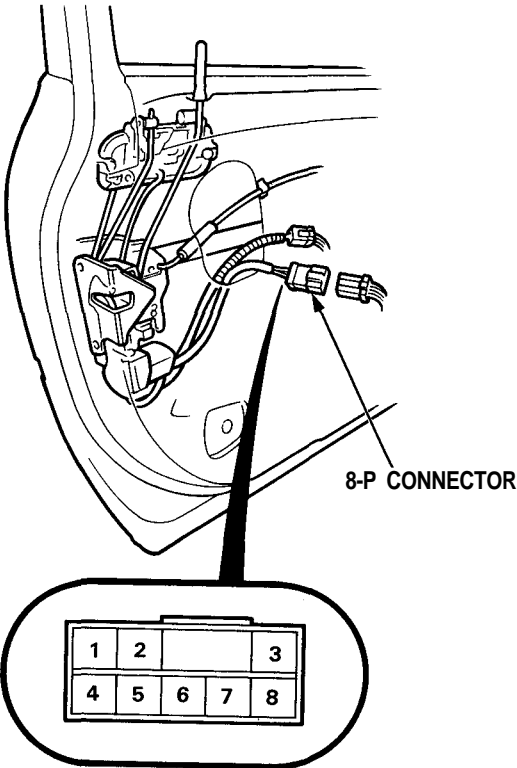

View from wire side

- 4. If the actuator fails to operate properly, replace it.

- 5. Check for continuity between the terminals in each switch position, according to the table.

Terminal			
Position	3	7	8
LOCK		○	○
UNLOCK	○	○	

