



Power Door Locks

Door Lock Switch Test

- 1. Remove the door panel (see [section 20](#)).
- 2. Disconnect the 3-P connector from the switch.
- 3. Check for continuity between the terminals in each switch position, according to the table.

Terminal	1	2	3
Position			
UNLOCK		○	○
OFF			
LOCK	○	○	

NOTE: Passenger's door is shown, driver's door is similar.

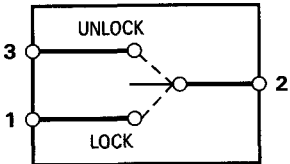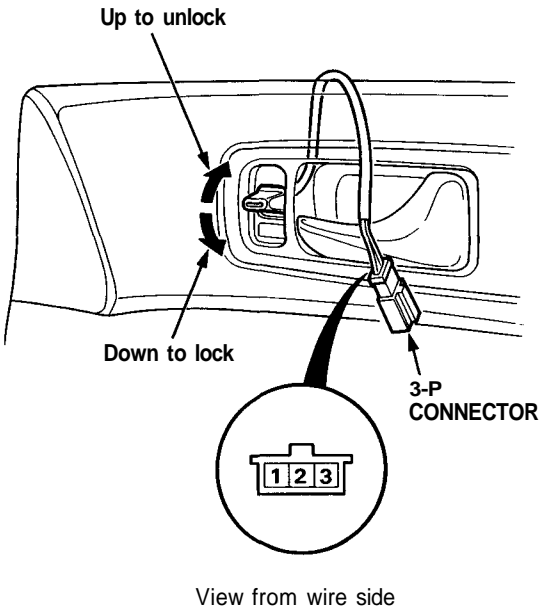

Door Key Cylinder Switch Test

- 1. Remove the door panel (see [section 20](#)).
- 2. Disconnect the 3-P connector from the actuator.
- 3. Check for continuity between the terminals in each switch position, according to the table.

Terminal	1	2	3
Position			
LOCK		○	○
UNLOCK	○	○	

NOTE: Passenger's door is shown, driver's door is similar.

