



## Seat Belt Switch Test

1. Slide the seat forward until the seat belt center buckle bolt is accessible, then disconnect the 3-P connector from the seat belt switch.
2. Check for continuity between the A and B terminals in each condition according to the table.

NOTE: The illustration shows the driver's seat.

Terminal	A	B
Condition		
Buckled		
Not Buckled		

- If there is no continuity, replace the switch.

