


Power Door Closer System

Power Door Closer Test

1. Remove the rear seat and rear quarter trim panel (see [section 20](#)).
2. Disconnect the 6-P connector with the door open.


NOTE: Driver's power door closer is shown, passenger's door closer is similar.

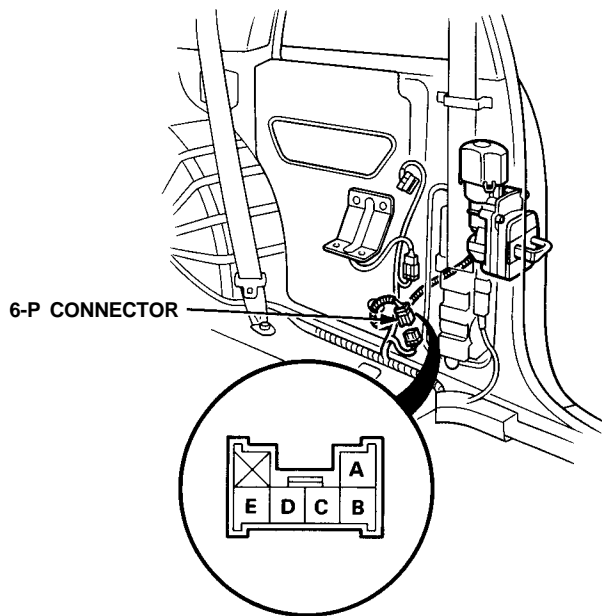

View from wire side


3. Connect battery power to the A terminal of the 6-P connector, and ground the C terminal: The motor should rotate smoothly. Disconnect power, and check continuity between the B and E terminals: There should be continuity.

NOTE: The illustration shows the condition when the door is closed.

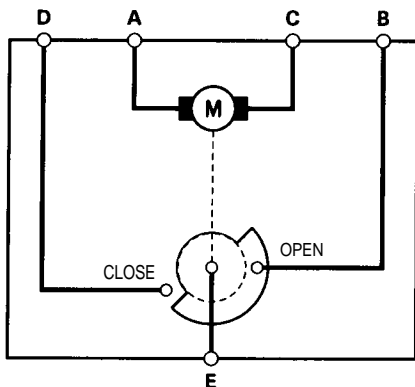

4. Connect battery power to the C terminal, and ground the A terminal. The motor should rotate smoothly in the opposite direction. Disconnect power, and check continuity between the D and E terminals: There should be continuity.

NOTE: The illustration shows the condition when the door is open.

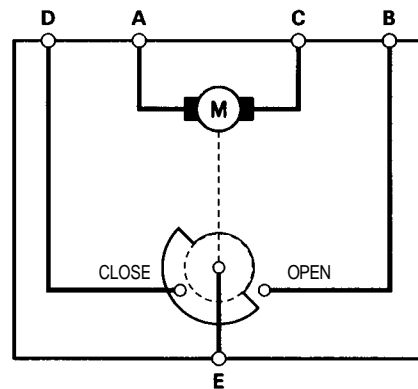

5. If the door closer fails to operate properly, replace it.