


Seat Heaters


Switch Removal

1. Remove the center console (see [section 20](#)).
2. Disconnect the 6-P connector to remove the switch, then push the switch out of the console.

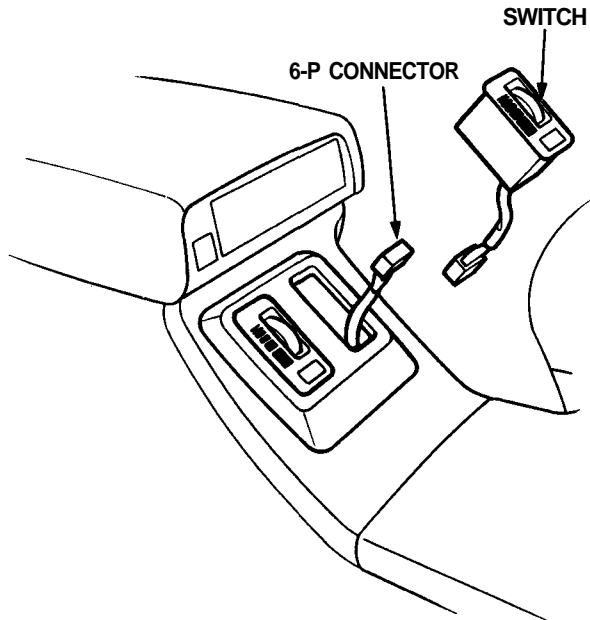

Switch Test

1. Remove the seat heater switch from the center console.
2. Check for continuity between the No. 1 and No. 2 terminals.
 - There should be continuity when the switch is ON.
 - There should be no continuity when the switch is OFF.

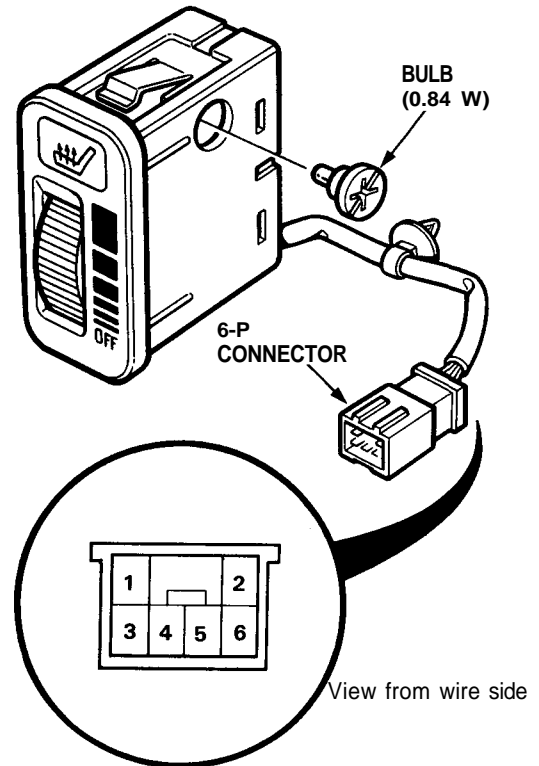

3. Measure the resistance between the No. 3 and No. 4 terminals while rotating the adjusting dial. Resistance should vary from $0\ \Omega$ to $10\text{k}\Omega$ as the dial is rotated.

