


Wipers/Washers

Wiper/Washer Switch Replacement

CAUTION:


- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

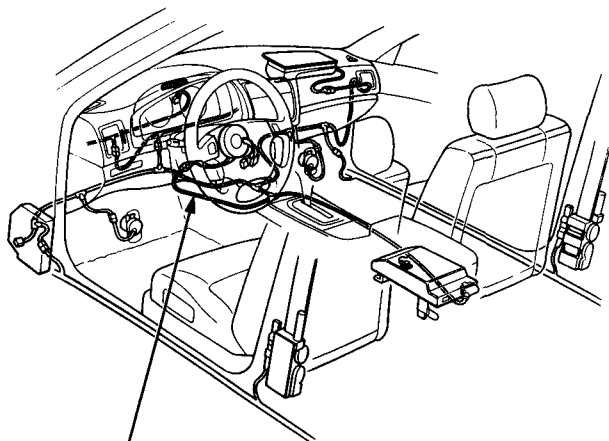

SRS MAIN HARNESS
(Covered with yellow outer insulation)

1. Pry the courtesy light controller and TCS switch (LS) out from the dashboard lower cover.


NOTE: Be careful not to damage the controller and TCS switch or the dashboard lower cover.

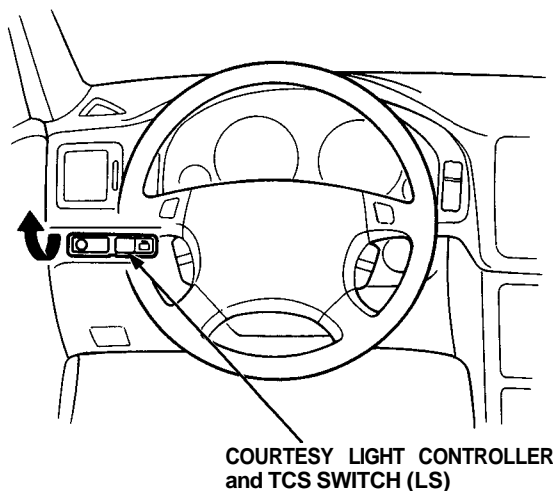

**COURTESY LIGHT CONTROLLER
and TCS SWITCH (LS)**

2. Disconnect the connectors from the courtesy light controller and TCS switch (LS).


3. Remove the three screws and the dashboard lower cover.

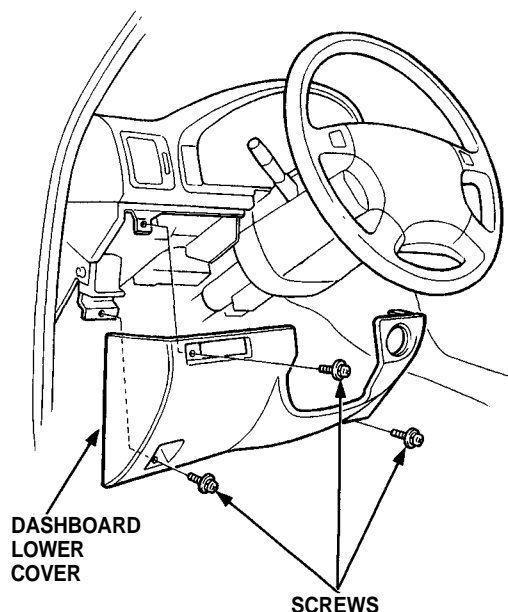

**DASHBOARD
LOWER
COVER**

SCREWS

4. Remove the steering column tilt cover (see page 23-180).
5. Remove the steering column covers (see page 23-181).
6. Turn the steering wheel toward the wiper/washer switch, and remove the two screws.
7. Disconnect the 14-P (10-P without TCS) connector from the switch, then remove the switch.

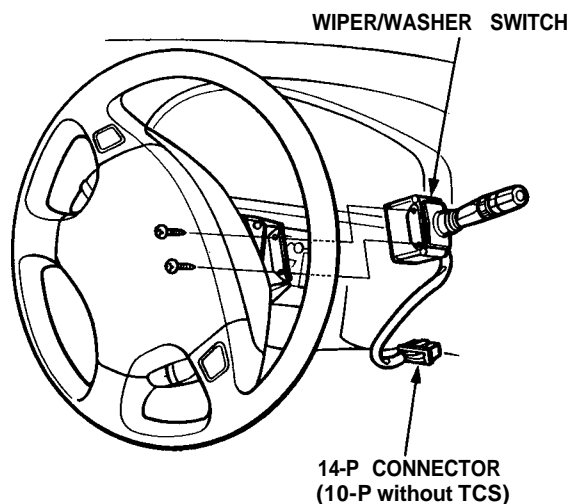

WIPER/WASHER SWITCH

**14-P CONNECTOR
(10-P without TCS)**