


# Cruise Control

## Component Location Index



### CAUTION:

- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

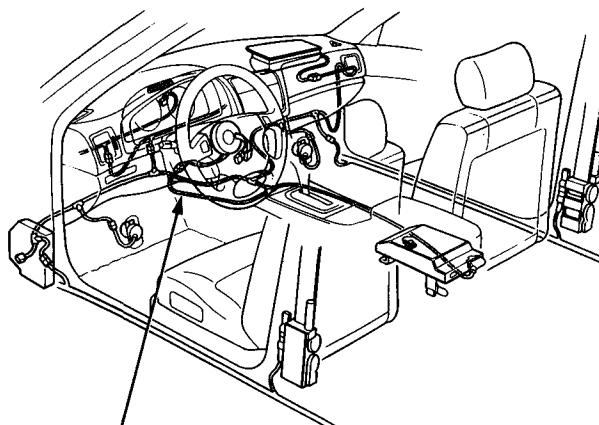

**SRS MAIN HARNESS**  
(Covered with yellow outer insulation)

### MAIN SWITCH

Test, page 23-308  
Replacement, page 23-308

### SET/RESUME/CANCEL SWITCH

Test, page 23-309  
Replacement, page 23-309

### CRUISE CONTROL UNIT

Input Test, page 23-306

### CLUTCH SWITCH (M/T)

Test, page 23-310

### CABLE REEL

Replacement, page 23-440

### A/T GEAR POSITION SWITCH (A/T)


Test, page 23-311  
Replacement, page 23-155

### BRAKE SWITCH

Test, page 23-310

### ACTUATOR ASSEMBLY

Test, page 23-311  
Cable Adjustment, page 23-312

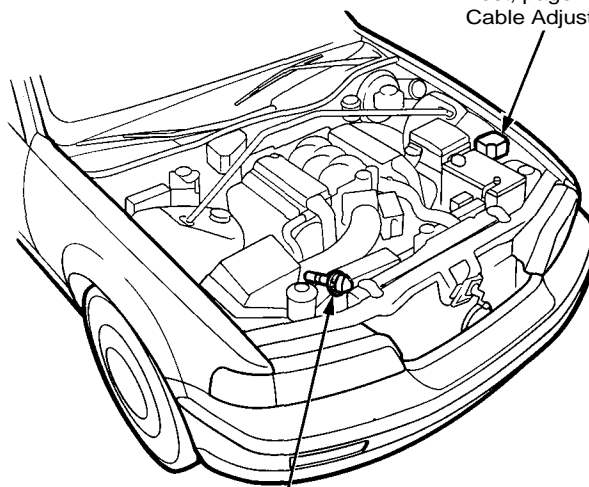

### VEHICLE SPEED SENSOR (VSS)

Test, page 23-136