




Tilt/Extend-retract Memory Sensor Test

CAUTION:

- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page 23-409).
- Do not disassemble or tamper with the airbag assembly.

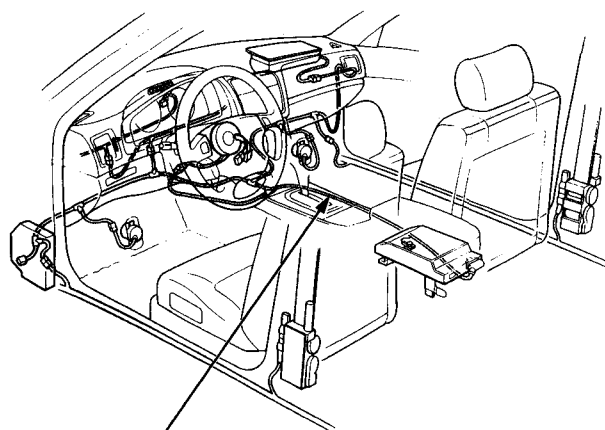


SRS MAIN HARNESS
(Covered with yellow outer insulation)

1. Pry the courtesy light controller and TCS switch (LS) out from the dashboard lower cover, then remove the three screws, and remove the dashboard lower cover (see page 23-180).
2. Remove the steering column tilt cover (see page 23-180).

3. Disconnect the left side wire harness 4-P connector from the steering column memory sensor 4-P connector.

STEERING COLUMN MEMORY SENSOR 4-P CONNECTOR

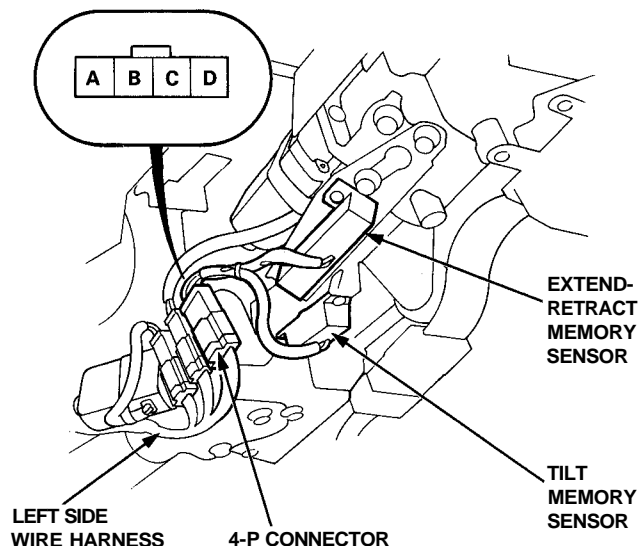

4. Measure resistance between the terminals according to the table.

Position	Terminal	Resistance
NEUTRAL	A - D	4 - 6 k Ω
EXTEND - RETRACT EXTEND \leftrightarrow RETRACT	A - B	1 k Ω (RETRACT) - 5 k Ω (EXTEND)
TILT UP \leftrightarrow DOWN	A - C	1 k Ω (DOWN) - 5 k Ω (UP)

