


Driving Position Memory System (DPMS)

Power Seat Motor Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat (see [section 20](#)), then disconnect the connectors from each motor.

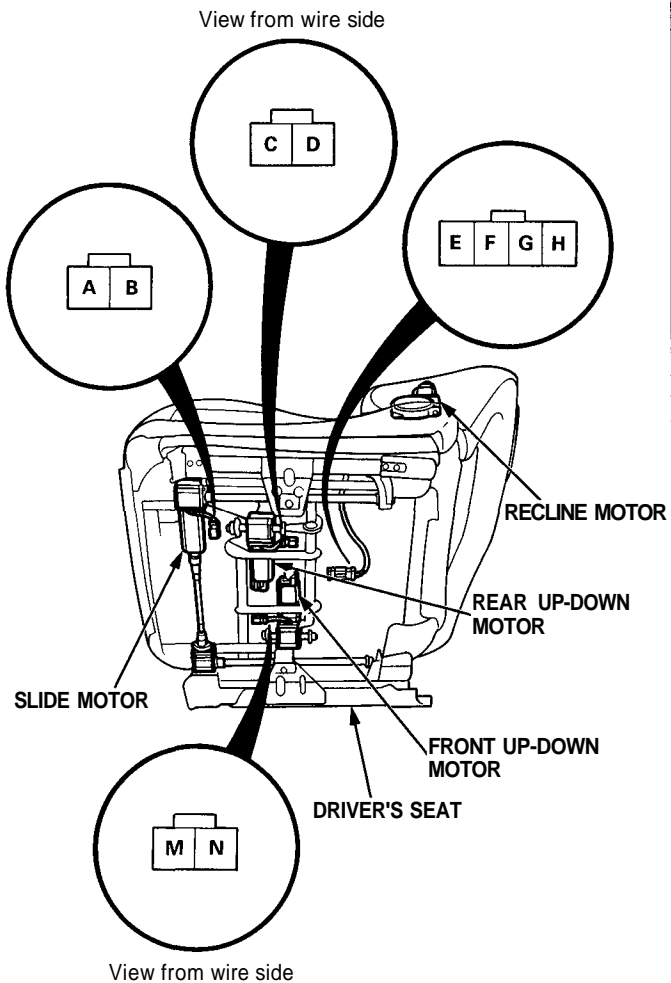

2. Test the motor in each direction by connecting power and ground according to the table.

CAUTION: When a motor stops running, disconnect the power terminal immediately.

SLIDE MOTOR:

Terminal Position	A	B
FORWARD	⊕	⊖
BACKWARD	⊖	⊕

RECLINE MOTOR:

Terminal Position	E	F
FORWARD	⊕	⊖
RECLINE	⊖	⊕

FRONT UP-DOWN MOTOR:

Terminal Position	C	D
UP	⊖	⊕
DOWN	⊕	⊖

REAR UP-DOWN MOTOR:

Terminal Position	M	N
UP	⊕	⊖
DOWN	⊖	⊕

NOTE: If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.