

Driving Position Memory System (DPMS)

Power Seat Recline Memory Limit Switch Test


CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat (see [section 20](#)), then disconnect the connector from the recline memory limit switch and recline motor.
2. Check for continuity between the terminals according to the table.

Terminal	Q	R
Seat back angle		
A area	○	○
B area		

NOTE: When battery power is connected to terminals E and F, the recline motor will run.

CAUTION: When a motor stops running, disconnect power immediately.

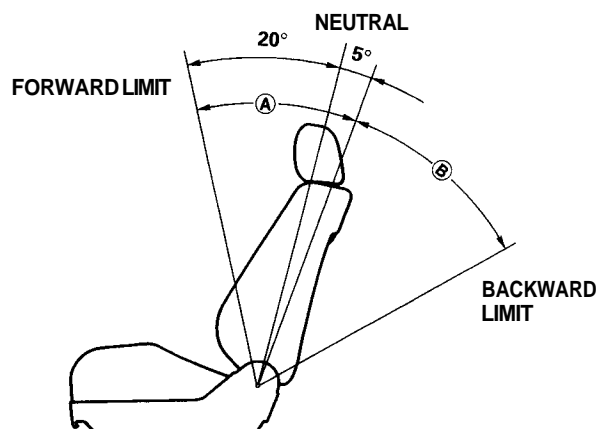

NOTE: If the motor does not run, reverse the test leads. If the motor still does not run, the motor must be faulty.

