



Power Seat Switch Test

CAUTION: Be careful not to damage the seat, the interior trim or the body.

1. Remove the passenger's seat, then remove the power seat, switch (see [section 20](#)).
2. Check for continuity between the terminals in each switch position, according to the table.

Terminal		A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
Position																			
SLIDE	FORWARD		○	○	○	○	○			○									
	NEUTRAL		○	○	○	○	○												
	BACKWARD		○	○	○	○	○			○									
RECLINE	FORWARD				○	○					○		○						
	NEUTRAL				○	○	○	○	○	○			○						
	BACKWARD				○	○					○		○						

