


# Power Passenger's Seat

## Rear Access Slide Switch Removal

1. Remove the label and screw, then remove the switch trim panel.

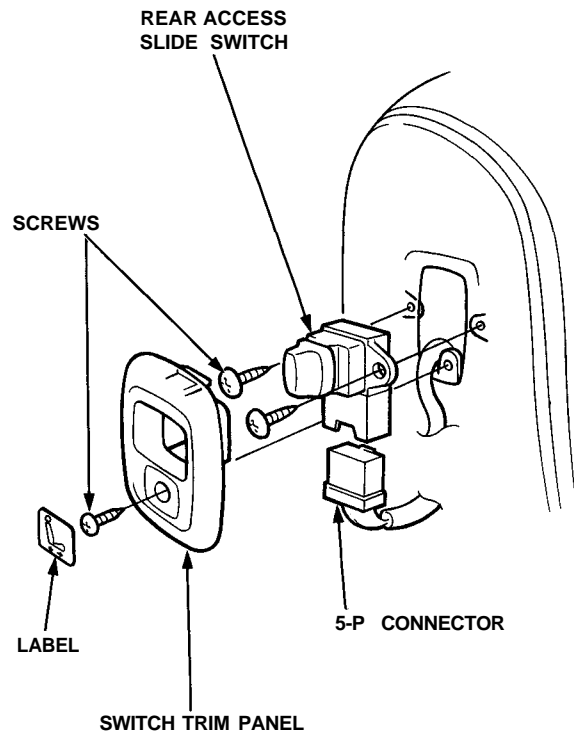

2. Remove the two screws, then disconnect the 5-P connector from the switch.

## Rear Access Slide Switch Test

1. Remove the switch from the seat back.
2. Check for continuity between the terminals in each switch position according to the table.

Position \ Terminal	A	B	C	D	E
Forward	○	○	○	○	○
Neutral		○	○	○	○
Backward	○	○	○	○	

