

Supplemental Restraint System (SRS)

Component Location Index

SRS INDICATOR LIGHT (In the gauge assembly)
Troubleshooting, page 23-408
Gauge assembly, page 23-127

CABLE REEL
Replacement, page 23-440

To CRUISE CONTROL SET/RESUME/CANCEL SWITCH

To DRIVER'S AIRBAG ASSEMBLY

To HORN SWITCH

To GROUND

To RADIO REMOTE SWITCH

FRONT PASSENGER'S AIRBAG ASSEMBLY
(Airbag and Inflator)
Replacement, page 23-432
Disposal, page 23-435

DRIVER'S AIRBAG ASSEMBLY
(Airbag and Inflator)
Replacement, page 23-432
Disposal, page 23-435

RIGHT DASH SENSOR
Replacement, page 23-444

UNDER-DASH FUSE/RELAY BOX

LEFT DASH SENSOR
Replacement, page 23-444

FRONT PASSENGER'S SEAT BELT PRETENSIONER
Replacement, page 23-448
Disposal, page 23-436

SRS UNIT
(Including sensing sensor)
Replacement, page 23-446

DRIVER'S SEAT BELT PRETENSIONER
Replacement, page 23-448
Disposal, page 23-436