


# Damper Disposal

## **⚠ WARNING**

- The dampers contain nitrogen gas and oil under pressure. The pressure must be relieved before disposal to prevent explosion and possible injury when scraping.
- Always wear eye protection to avoid getting metal shavings in your eyes when the damper pressure is relieved.

Place the damper on a level surface with its rod extended and drill a hole of 2.0–3.0 mm (0.08 – 0.12 in) diameter in the body to release the gas.

< Front Damper: >

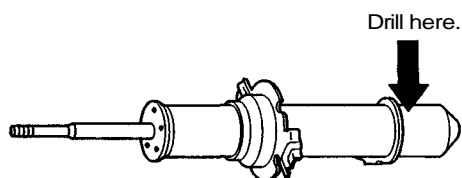

< Rear Damper: >

