



## Power Seat Switch Test

**CAUTION:** Be careful not to damage the seat, the interior trim or the body.

1. Remove the driver's seat, then remove the power seat switch (see [section 20](#)).
2. Check for continuity between the terminals in each switch position, according to the table.

Terminal		A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R
Position																			
SLIDE	FORWARD		○							○									
	NEUTRAL		○	○				○	○										
	BACKWARD			○						○									
RECLINE	FORWARD				○						○								
	NEUTRAL	○			○								○	○					
	BACKWARD										○		○						
FRONT UP-DOWN	UP								○	○									
	NEUTRAL		○	○				○	○										
	DOWN							○		○									
REAR UP-DOWN	UP	○									○								
	NEUTRAL	○			○									○	○				
	DOWN										○			○					

