


Power Driver's Seat

Motor Test

CAUTION: Be careful not to damage the seats, the interior trim or the body.

1. Remove the driver's seat, then disconnect the connectors from each motor.

View from wire side

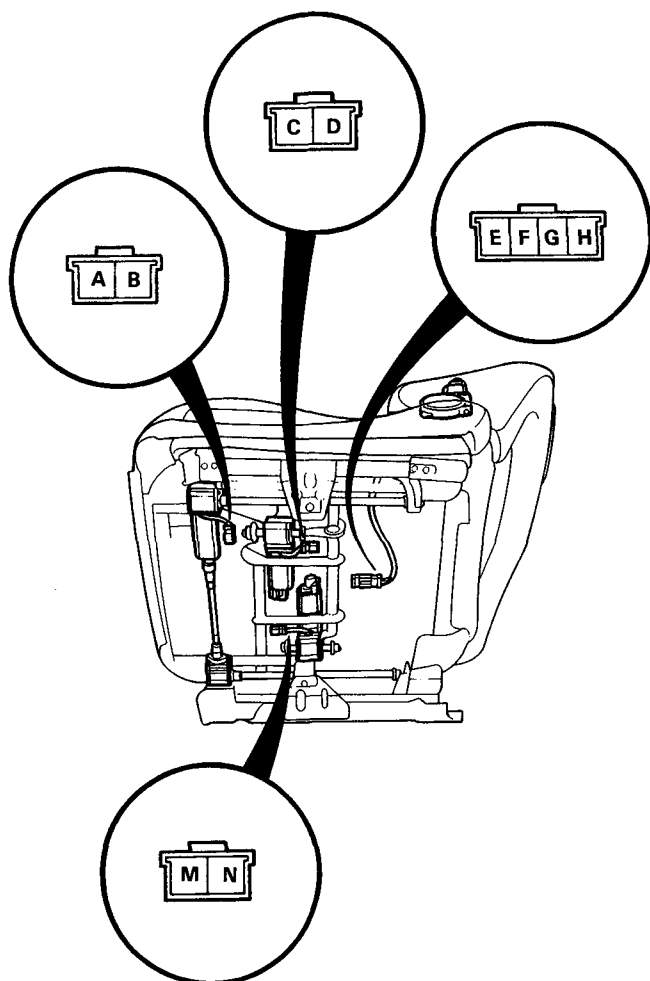

View from wire side

2. Test the motors.

CAUTION: When a motor stops running, disconnect the power terminal immediately.

SLIDE MOTOR:

Terminal	A	B
Position		
FORWARD	⊕	⊖
BACKWARD	⊖	⊕

RECLINE MOTOR:

Terminal	E	F
Position		
FORWARD	⊕	⊖
RECLINE	⊖	⊕

UP-DOWN MOTORS:

Terminal	C	D	M	N
Position				
FRONT UP			⊕	⊖
FRONT DOWN			⊖	⊕
REAR UP	⊖	⊕		
REAR DOWN	⊕	⊖		

NOTE: If a motor does not run, reverse the test leads. If the motor still does not run, it must be faulty.