



## Position Memory Switch Test

1. Remove the driver's door panel, then disconnect the 8-P connector from the power seat position memory switch.
2. Remove the position memory switch, then check for continuity between the terminals in each switch position, according to the table.

Terminal		A	C	D	E	G	H
Position							
MEMO BUTTON	ON				○	○	
	OFF						
POSITION BUTTON 1	ON				○	○	
	OFF						
POSITION BUTTON 2	ON		○	○			
	OFF						
ILLUMINATION		○	○	○			

