

# Transmission Cover

## Installation

NOTE: Replace all O-rings and washers.

1. Reassemble the parts following the numbered sequence,

	Bolt Size	Torque Value	Sequence Number
A	8 x 1.25 mm	28 N·m (2.8 kg-m, 21 lb-ft)	⑦ ⑬
B	36 mm SEALING BOLT	25 N·m (2.5 kg-m, 18 lb-ft)	⑨
C	12 mm SEALING BOLT	22 N·m (2.2 kg-m, 16 lb-ft)	⑩
D	8 mm SEALING BOLT	18 N·m (1.8 kg-m, 13 lb-ft)	⑪

