


# Max Cool Motor

## Test

1. Connect battery power to the No. 1 terminal of the max cool motor, and connect the No. 2 terminal to ground.
2. The max cool motor should run. If it doesn't connect the No. 4 terminal; the motor should then run.

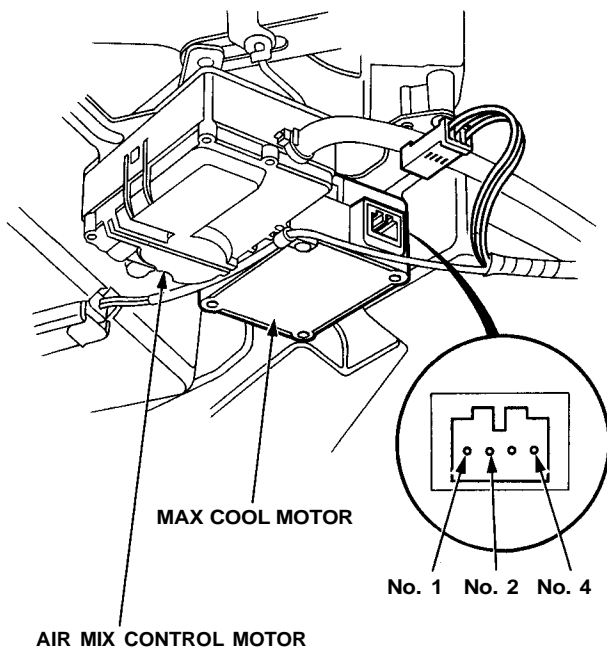

## Removal

1. Remove the air mix motor mounting bracket (previous page).
2. Remove the max cool motor from the air mix motor mounting bracket as shown.

