

Air Mix Control Door

Adjustment

1. Set the control unit to HOT.
2. Then make sure the air mix control rod, the max cool rod, and the air mix control arm are in the positions shown.

