




# Evaporator Temperature Sensor

## Removal

1. Disconnect the evaporator temperature sensor connector.

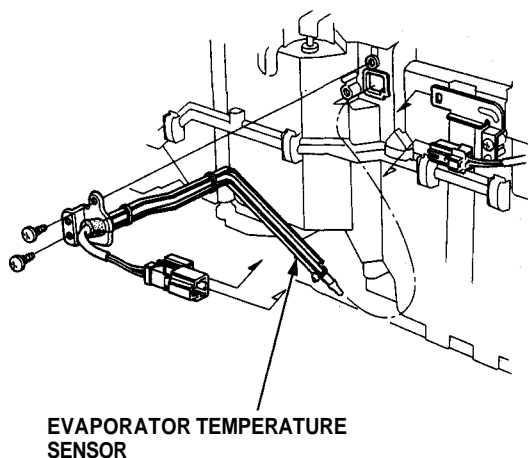

2. Remove the evaporator temperature sensor by removing the clips and screws.

## Test

Compare the resistance reading between terminals of the evaporator temperature sensor with the specifications shown in the following graph: It should be within specifications.

**CAUTION:** The sensor uses a thermistor which can be damaged if high current is applied to it during testing. Therefore, use a circuit tester that puts out a measuring current of 1 mA or less. (At the 20 k $\Omega$  range)

