
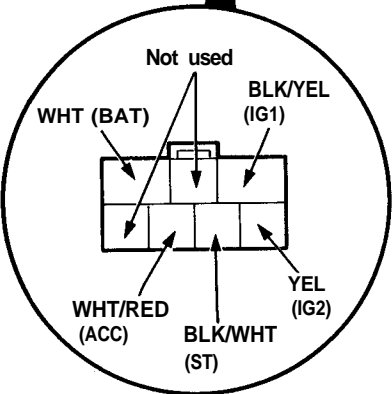


Ignition Switch

Test

- 1. Remove the dashboard lower cover (see page 23-79).
- 2. Disconnect the 7-P connector from the under-dash fuse box.

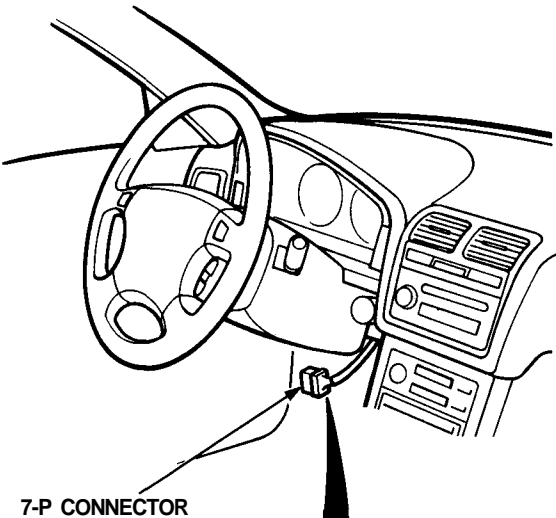

View from wire side

- 3. Check for continuity between the terminals in each switch position according to the table.

| Terminal Position | WHT/ RED (ACC) | WHT (BAT) | BLK/ YEL (IG1) | YEL (IG2) | BLK/ WHT (ST) |
|----------------------|----------------------|--------------|----------------------|--------------|---------------------|
| O | | | | | |
| I | ○ | ○ | | | |
| II | ○ | ○ | ○ | ○ | |
| III | | ○ | ○ | ○ | ○ |

Electrical Switch Replacement

- 1. Remove the dashboard lower cover (see page 23-79).
- 2. Disconnect the 7-P connector from the under-dash fuse box.
- 3. Insert the key and turn it to "0"
- 4. Remove the two screws and replace the switch.

