



# Radiator and Condenser Fan Controls

## Control Unit Terminals

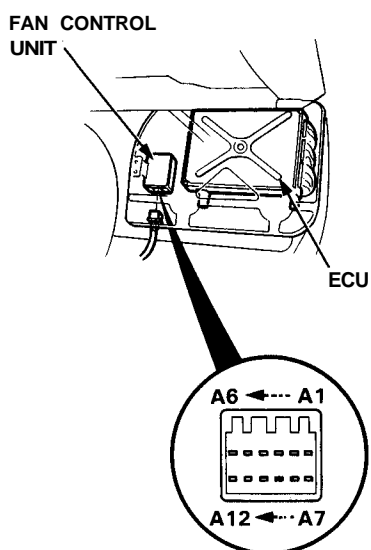

Terminal	Wire	Connects to
A1	BLU/GRN	Coolant temperature sensor ⊖
A2	BLU	Radiator fan relays (Coil ⊖)
A3	LT BLU	A/C pressure switch A
A4	BLK	Ground (G301, G302, G303)
A5	GRN	ECU
A6	RED/BLU	A/C pressure switch B
A7	BLU/WHT	Coolant temperature sensor ⊕
A8		Not used
A9	BLU/YEL	Fan timer unit
A10		Not used
A11	BLU/BLK	ECU (ACS)
A12	YEL/BLK	IG2 (Main power supply)

## Timer Unit Terminals

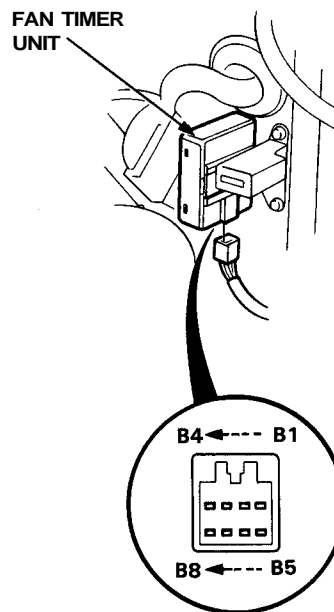

Terminal	Wire	Connects to
B1	BLK	Ground (G303)
B2	BLU/YEL	Fan control unit
B3	BLU/RED	Condenser fan relay ⊖
B4	YEL/BLU	Power supply (For condenser fan relay with ignition switch ON)
B5	GRN	Condenser fan relay ⊕
B6	BLK/RED	Power supply (For condenser fan relay with ignition switch OFF)
B7		Not used
B8	ORN	Oil temperature sensor