




Dash Lights Brightness Control

Component Location Index

CAUTION:



- All SRS wiring harnesses are covered with yellow outer insulation.
- Before disconnecting any part of the SRS wire harness, install the short connectors (see page [23-372](#)).
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

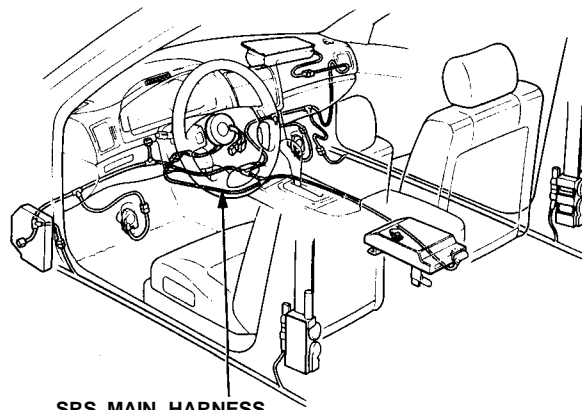

SRS MAIN HARNESS

DASH LIGHTS BRIGHTNESS CONTROLLER

Test/Replacement, page [23-196](#)

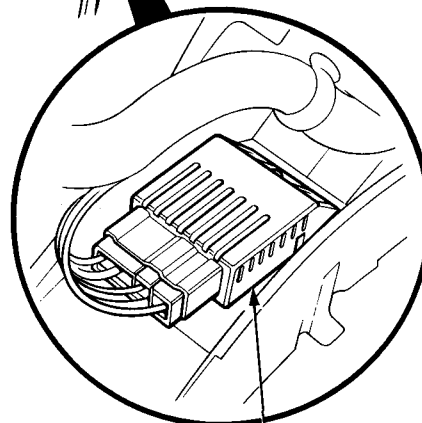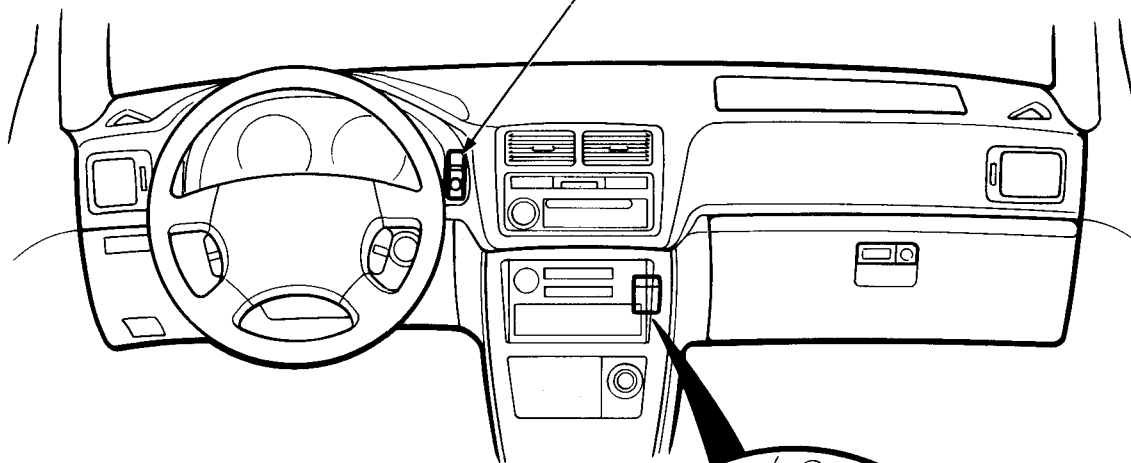

DASH LIGHTS BRIGHTNESS CONTROL UNIT

Input Test, page [23-195](#)