



Radio/Cassette Unit Terminals

[L]

For WINDOW ANTENNA

For MAST ANTENNA

PLUG

A1 --- A8

A9 --- A16

B1 --- B5

[LS]

PLUG

For WINDOW
ANTENNA

For MAST ANTENNA

[L]

Terminal	Wire	Destination
A1	RED/GRN	Passenger's door speaker ⊕
A2	BLU/GRN	Driver's door speaker ⊕
A3	RED/BLK	Light-on signal
A4	WHT/YEL	Constant power (Tuning memory)
A5	YEL/RED	ACC (Main stereo power supply)
A6	YEL/WHT	Power to antenna with radio switch ON
A7	BLU/YEL	Left rear speaker ⊕
A8	RED/YEL	Right rear speaker ⊕
A9	BRN/BLK	Passenger's door speaker ⊖
A10	GRY/BLK	Driver's door speaker ⊖
A11	BRN	Telephone mute signal
A12	GRN/WHT	Security (IN)
A13	LT GRN	Security (OUT)
A14	BLK	Ground (G501)
A15	GRY/WHT	Left rear speaker ⊖
A16	BRN/WHT	Right rear speaker ⊖

Terminal	Wire	Destination
A1	RED/GRN	Passenger's door speaker ⊕
A2	BLU/GRN	Driver's door speaker ⊕
A3	RED/BLK	Light-on signal
A4	WHT/YEL	Constant power (Tuning memory)
A5	YEL/RED	ACC (Main stereo power supply)
A6	YEL/WHT	Power to antenna with radio switch ON
A7	BLU/YEL	Left rear speaker ⊕
A8	RED/YEL	Right rear speaker ⊕
A9	BRN/BLK	Passenger's door speaker ⊖
A10	GRY/BLK	Driver's door speaker ⊖
A11	BRN	Telephone mute signal
A12	GRN/WHT	Security (IN)
A13	LT GRN	Security (OUT)
A14	BLK	Ground (G501)
A15	GRY/WHT	Left rear speaker ⊖
A16	BRN/WHT	Right rear speaker ⊖

[LS]

A1	BLU	Amplifier (Passenger's door speaker ⊕)
A2	WHT	Amplifier (Driver's door speaker ⊕)
A3	RED/BLK	Light-on signal
A4	WHT/YEL	Constant power (Tuning memory)
A5	YEL/RED	ACC (Main stereo power supply)
A6	YEL/WHT	Power to antenna and amplifier with radio switch ON
A7	ORN	Amplifier (Left rear speaker ⊕)
A8	YEL	Amplifier (Right rear speaker ⊕)
A9	BRN	Amplifier (Passenger's door speaker ⊖)
A10	BLK	Amplifier (Driver's door speaker ⊖)
A11	BRN	Telephone mute signal
A12	GRN/WHT	Security (IN)
A13	LT GRN	Security (OUT)
A14	BLK	Ground (G501)
A15	GRN	Amplifier (Left rear speaker ⊖)
A16	RED	Amplifier (Right rear speaker ⊖)

[L, LS]

B1	—	(Not used)
B2	—	(Not used)
B3	—	(Not used)
B4	—	(Not used)
B5	LT BLU	Radio remote switch