


# Stereo Sound System

## Auto Antenna Motor Replacement

1. Remove the trunk side lining.
2. Disconnect the 3-P connector and antenna lead from the motor, then remove the special nut and two mounting nuts to take out the motor with the mast antenna.

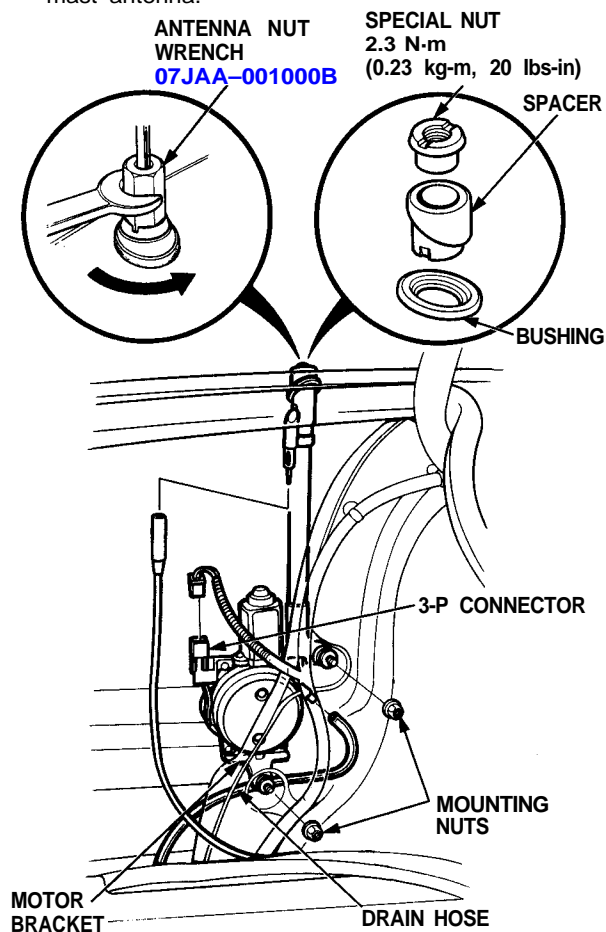


3. Install in reverse order of removal.

NOTE: Tighten the special nut, then tighten the two mounting nuts to the motor bracket.

## Front Speaker Replacement

1. Remove the door panel.
2. Remove the four screws, then disconnect the connector from the speaker.

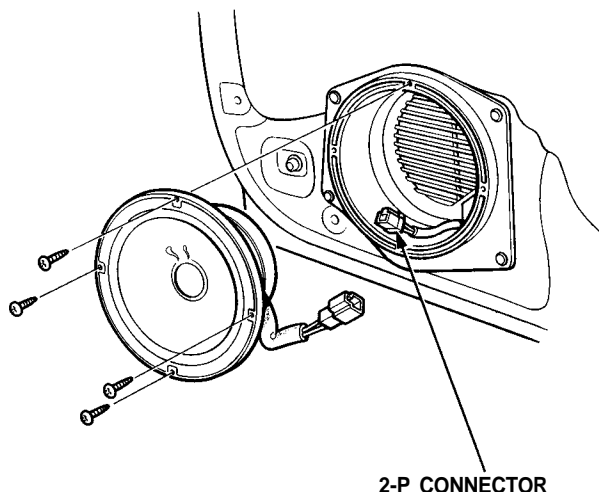

## Rear Speaker Replacement

1. Remove the two clips in the rear tray box, then remove the rear tray (see [section 20](#)).
2. Remove the four screws, then disconnect the connector from the speaker.
3. Take out the speaker from the speaker box.

