



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected Symptom										Open circuit, loose or disconnected terminals
	Blown indicator light bulb	Blown No. 3 (15A) fuse (In the under-dash fuse box)	Defogger timer circuit input (In the integrated control unit)	Blown No. 13 (7.5A) fuse (In the under-dash fuse box)	Blown No. 33 (40A) fuse (In the under-hood fuse/relay box)	Function test	Defogger relay	Defogger switch	Poor ground	
Defogger operates, but indicator light does not go on.	1									YEL/BLK
Defogger does not operate and indicator light does not go on.		1	3	2				4	G251 G301 (91)	YEL, YEL/WHT or YEL/BLK
Defogger does not operate, but indicator light goes on.					1	3	2	4	G691	YEL/WHT, YEL/BLK or BLK/GRN
Operating time is too long or too short (normal operation time is 25 minutes).			1							