



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 36 (40A) fuse (In the under-hood fuse/relay box)	Blown No. 13 (7.5A) fuse (In the under-dash fuse box)	Blown No. 56 (7.5A) fuse (In the under-dash fuse box)	Power window relay	In the under-dash fuse box				Driver's door switch assembly	Passenger's switch	Driver's motor	Pulser (In driver's motor)	Passenger's motor	Window regulator	Driver's switch assembly input	Door switches	Key-off timer circuit (In the integrated control unit)	Poor ground	Open circuit, loose or disconnected terminals
Symptom																				
All windows do not operate.		1			2													3	G301	WHT/YEL or WHT/GRN
Driver's window does not operate.						1						2			3	4			G301 G302 G303	WHT/YEL
Driver's window does not operate in AUTO.													2			1				BLU
Passenger's windows do not operate.	Right front						1			2	3			4	5					BLU/BLK
	Left rear							1		2	3			4	5					GRN/BLK
	Right rear								1	2	3			4	5					YEL/BLK
All windows do not operate within 10 minutes after the ignition switch is OFF.				1													2	3		