



## Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 44 (20A) fuse (In the under-hood fuse/relay box)	Disconnected or obstructed door lock rod/linkage	Driver's door lock knob switch (In the driver's door lock actuator)	Ignition key switch	Driver's door switch	Passenger's door switch	Driver's door lock actuator	Passenger's door lock actuator	Driver's door lock switch	Passenger's door lock switch	Control unit input	Passenger's door key cylinder	Poor ground	Open circuit, loose or disconnected terminals
Symptom															
Power door lock system doesn't operate at all.		1											2	G301, G304	WHT/GRN
Doors don't lock or unlock with the driver's power door lock switch	Both doors									1		2		G301, G304	GRN/WHT <sup>1</sup> or GRN/RED <sup>1</sup>
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't lock or unlock with the passenger's power door lock switch.	Both doors										1	2		G301, G304	BLK/WHT or BLK/RED
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't lock with the driver's door lock knob. (ignition key not inserted and doors closed).	Both doors			1								2		G301, G304	GRN/BLK or BLU/WHT <sup>2</sup>
	One door		1					2				3			YEL/RED or WHT/RED
Doors don't lock or unlock with the passenger's door key cylinder switch.	Both doors											2	1	G301, G304	GRN/BLU <sup>2</sup> or GRN/WHT <sup>2</sup>
	One door		1					2				3			YEL/RED or WHT/RED
The doors will lock when the ignition key is inserted and one of the front doors is open).					1	2	3					4		G301, G304	BLU/WHT <sup>1</sup> , GRN/RED <sup>2</sup> or GRN/BLU