




Test

1. Check the No. 8 (20A) fuse in the under-dash fuse box.
2. Slide the front seat backward to disconnect the 4-P connector from the power seat belt presenter motor assembly.
3. With the ignition switch ON, there should be battery voltage between the BLU/YEL and BLK terminals of the 4-P connector on the floor.

NOTE: The floor on the driver's side is shown, the floor on the passenger's side is similar.

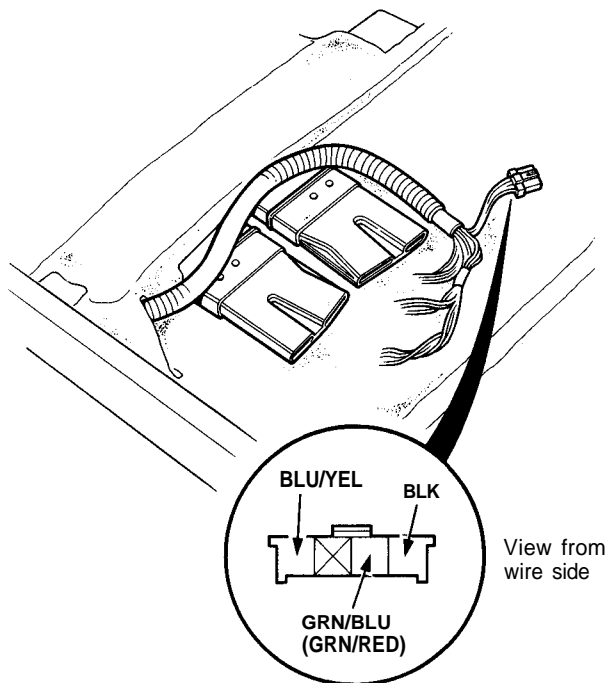

(): Passenger's side

- If there is no voltage, check for:
 - Poor ground (G251, G301), (G305). (G301, G302, G304 '91)
 - An open in the BLU/YEL wire.
- If there is battery voltage, check for continuity between the GRN/BLU (GRN/RED) terminal and body ground with the driver's (passenger's) door opened.
 - If there is no continuity, check the left (right) door switch.
 - If there is continuity, check the wire harness connections. If all relays and the connections are OK, yet the presenter still fails to operate, repair the belt or replace the power seat belt presenter motor assembly (see [section 20](#)).