




## Motor Test

**CAUTION:** Be careful not to damage the seats, the interior trim or the body.

1. Remove the front passenger's seat, then disconnect the connectors from each motor.

View from wire side.

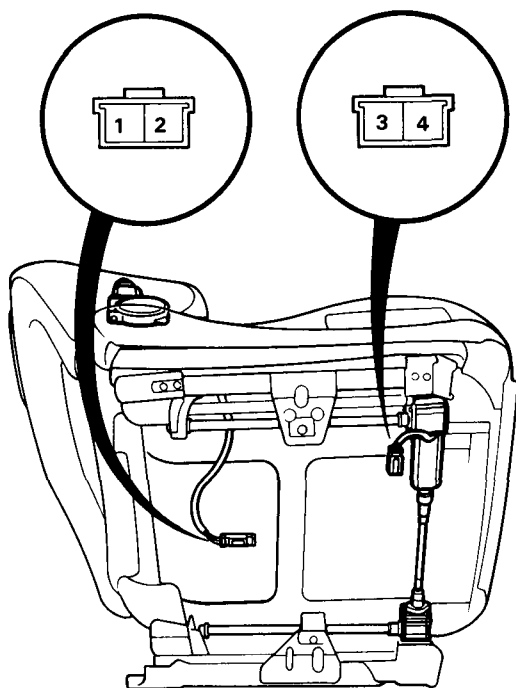

2. Test motor operation.

**CAUTION:** When a motor stops running, disconnect the power terminal immediately.

### WHOLE SEAT

**FORWARD:** Connect battery power to the No. 4 terminal and ground to the No. 3 terminal.

### WHOLE SEAT

**BACKWARD:** Connect battery power to the No. 3 terminal and ground to the No. 4 terminal.

### SEAT BACK

**FORWARD:** Connect battery power to the No. 1 terminal and ground to the No. 2 terminal.

### SEAT BACK

**RECLINE:** Connect battery power to the No. 2 terminal and ground to the No. 1 terminal.

**NOTE:** When a motor does not run, reverse the battery connections. If the motor still does not run, replace it.