

Security Alarm System

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected Symptom		Blown No. 15 (7.5A) fuse	In the under-hood fuse/relay box	Blown No. 20 (7.5A) fuse	In the under-dash fuse box	Blown No. 39 (20A) fuse	Faulty indicator light (LED)	Horn circuit	Starting system	A/T: Shift lever position switch	Trunk key cylinder switch	Lighting system	Door key switch	Ignition key switch	Trunk key cylinder switch	Trunk latch switch	Hood switch	Door switch	Control unit input	Poor ground	Open circuit, loose or disconnected terminals
Security alarm can't be set (and indicator light does not flash).		1	2	3	4									5						G301 G302	YEL/BLU, YEL, WHT/GRN, GRN/RED or BLU/WHT
Starting system does not operate.									1	2									3	G301 G302	BLK/WHT (BLU) or BLK/YEL (BLU): M/T
Security alarm can be set, but alarm does not operate when the trunk, hood or either front door is unlocked without the key.	Horn alarm			1	2														3		WHT/GRN, BLU, or BLU/RED
	Headlight alarm										1								2		BLU/RED ² or RED/GRN
	Both alarms																		1		
Alarm does not cancel when the door is opened with the key.												1							2	G301 G302 G304	GRN/RED ² , GRN/BLU ¹ , GRN/BLK or BLU/RED ³
Alarm not canceled when the key is inserted in the ignition switch.			1											2					3		BLK/RED or BLU/WHT
Alarm not canceled when the trunk lid is opened with the key.															1	2			3	G451	GRN/RED ¹ or BLU/GRN
Alarm does not operate when the hood is opened.																	1		2	G153	YEL/RED
Alarm does not operate when the door is opened.																		1	2	G301 G302 G304	GRN/BLU or GRN/RED ³