




## Troubleshooting

### The SRS Indicator Does Not Light

#### CAUTION:

- Use only a digital multimeter (KS-AHM-32-003) to check the system.

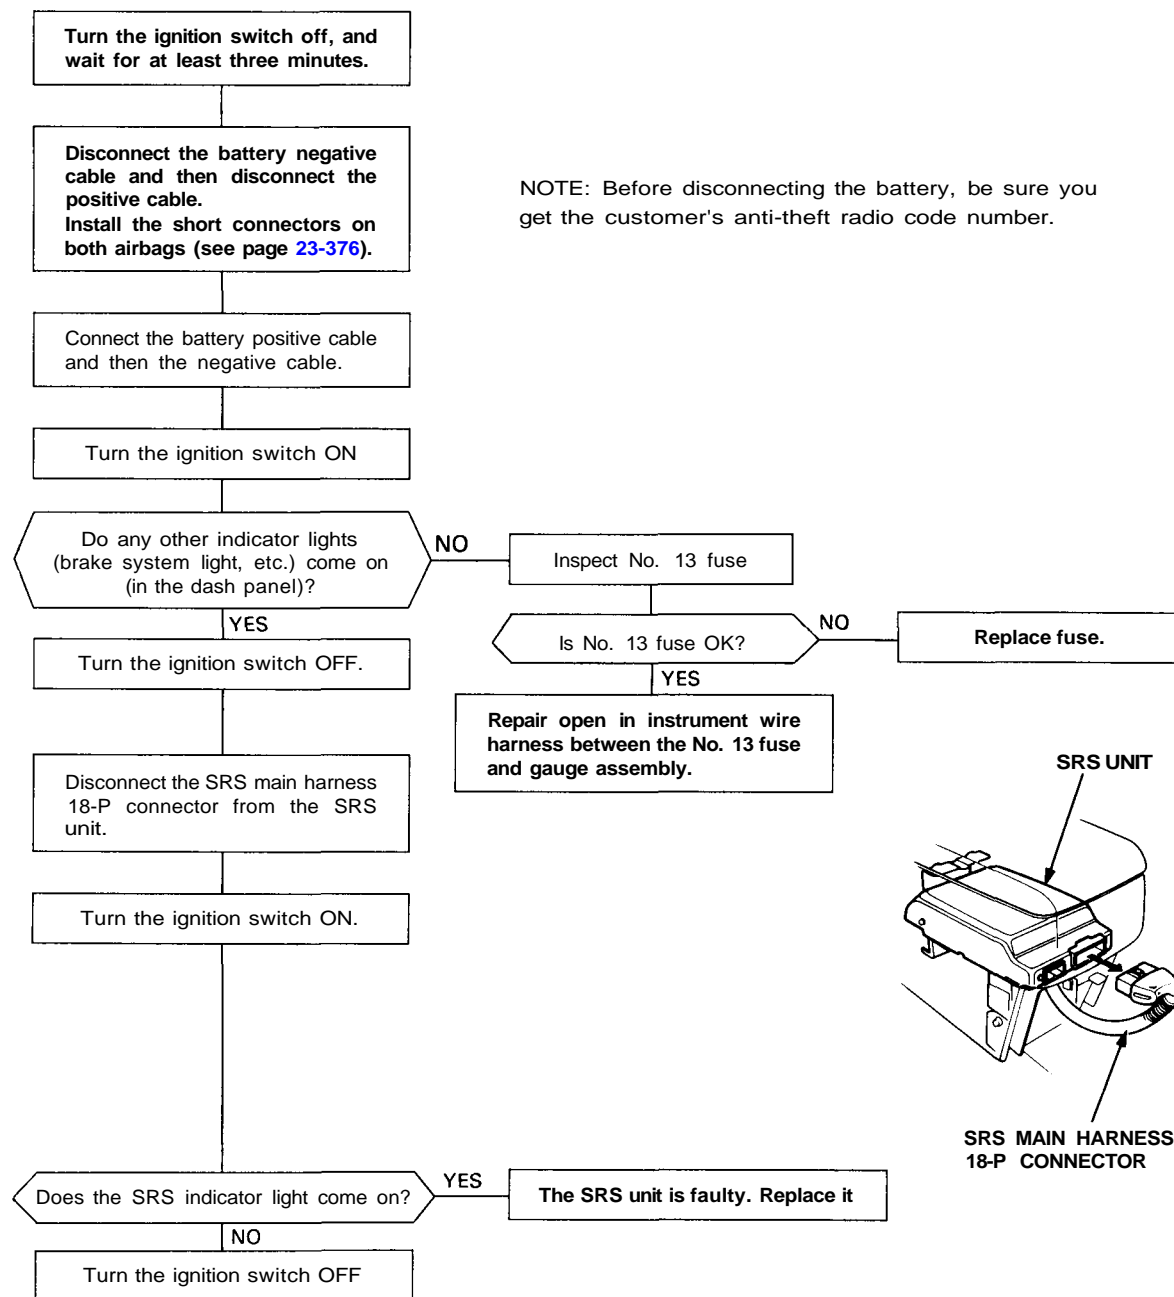

(To page 23-380)

(cont'd)