

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis D4 indicator light blinks fourteen times.

Disconnect No. 15: ACG(s) fuse in the under dash fuse box for 10 seconds to reset the ECU.

Drive the car for several miles so that the transmission upshifts and down-shifts several times.

Does self-diagnosis D4 indicator light blink fourteen times?

NO

Intermittent failure, system is OK at this time.

YES

Replace the ECU.

