


Seat Heaters (CANADA)


Switch Removal

1. Remove the center console (See [section 20](#)).
2. Disconnect the 6-P connector to remove the switch, then push the switch out of the console.

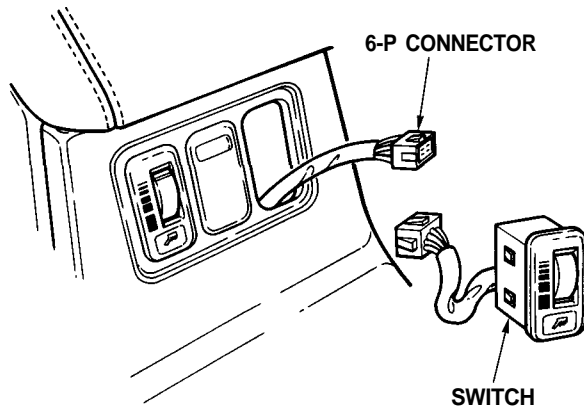

Switch Test

1. Remove the seat heater switch from the center console.
2. There should be continuity between the No. 1 and No. 2 terminals when the switch is ON. There should be no continuity when the switch is OFF.

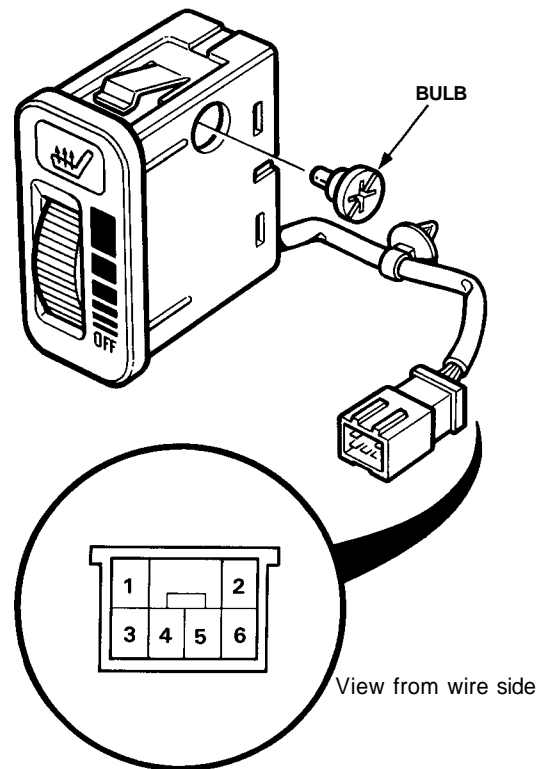

3. Measure resistance between the No. 3 and No. 4 terminals while rotating the adjusting dial. Resistance should vary from 0 to 10,000 ohms as the dial is rotated.

