

# Fuel and Emissions

Special Tools .....	11-2
Component Locations Index ...	11-3
System Description	
Vacuum Connections .....	11-5
Electrical Connections .....	11-10
System Connectors	
Engine Compartment ...	11-20
Dash and Floor .....	11-26
Trunk Area .....	11-30
Troubleshooting	
Troubleshooting Guide ....	11-32
Self Diagnostic Procedure ..	11-34
How to Read Flow Charts ..	11-39
PGM-FI System	
System Description .....	11-40
Troubleshooting Flowcharts	
'91-'92 Models	
Check Engine Light	
Never On .....	11-26
Check Engine Light	
Stays On .....	11-27
'93-'95 Models	
MIL Never On .....	11-42
MIL Stays On .....	11-43
Idle Control System	
Troubleshooting Guide .....	11-105
System Description .....	11-106
System Description .....	11-81

Troubleshooting Flowcharts	
Air Conditioning Signal ....	11-86
Alternator FR Signal .....	11-88
Starter Switch Signal .....	11-94
PSP Switch Signal .....	11-100
Brake Pedal Position Switch	
Signal .....	11-98
A/T Gear Position	
Signal .....	11-90
Neutral Position Switch	
Signal .....	11-92
Clutch Switch	
Signal .....	11-94
Fast Idle Thermo Valve	
Description .....	11-101
Inspection .....	11-101
Starting Air Valve	
Description .....	11-102
Idle Speed	
Inspection/Adjustment .....	11-103
Fuel Supply System	
Troubleshooting Guide .....	11-105
System Description .....	11-106
Fuel Pressure .....	11-106
Injector Replacement .....	11-111
Injector Resistor	
Description .....	11-113
Testing .....	11-113
Fuel Pressure Regulator	
Description .....	11-114
Testing .....	11-114
Replacement .....	11-115

Fuel Pressure Regulator Solenoid Valve	
Troubleshooting .....	11-116
Fuel Filter	
Replacement .....	11-118
Fuel Pump	
Description .....	11-119
Testing/Replacement .....	11-120
PGM-FI Main Relay	
Description .....	11-121
Testing .....	11-121
Troubleshooting Flowchart ..	11-122
Fuel Tank	
Replacement .....	11-124
Intake Air System	
Troubleshooting Guide .....	11-125
System Description .....	11-126
Air Cleaner (ACL)	
Replacement .....	11-127
Throttle Cable	
Inspection/Adjustment .....	11-128
Installation .....	11-128
Throttle Body	
Description .....	11-129
Inspection .....	11-129
Disassembly .....	11-131
Intake Air Bypass (IAB) Control System	
Description .....	11-132
Troubleshooting .....	11-133
Valve Testing .....	11-137
Disassembly .....	11-138

Emission Control System	
Troubleshooting Guide .....	11-139
Description .....	11-140
Tailpipe Emission	
Inspection .....	11-140
Three Way Catalytic Converter (TWC)	
Description	
'91-'93 Models .....	11-139
'94-'95 Models .....	11-141
Inspection	
'91-'93 Models .....	11-140
'94-'95 Models .....	11-143
PCV Valve	
Description .....	11-151
Inspection .....	11-115
Evaporative Emission Controls	
Description	
'91-'93 Models .....	11-151
'94-'95 Models .....	11-152
Troubleshooting Flowchart	
'91-'93 Models .....	11-153
'94-'95 Models .....	11-154
EVAP Two Way Valve	
Testing .....	11-157
Pulsed Secondary Air Injection (PAIR)	
System (L and LS Models)	
Description .....	11-158
Troubleshooting .....	11-159