

Manual Transmission

Special Tools	13-2
Description (6-Speed)	
Reverse Lockout System	13-3
Maintenance	
Transmission Oil	13-4
Back-up Light Switch, Neutral	
Position Switch Replacement	
'91-'93 Models	13-3
'94-'95 Models	13-5
Reverse Lockout System (6-Speed)	
('94-'95 Models)	
Component Location	13-6
Circuit Diagram	13-7
Troubleshooting	13-8
Reverse Lockout Relay (6-Speed)	
('94-'95 Models)	
Test	13-12
Reverse Lockout Solenoid (6-Speed)	
('94-'95 Models)	
Test	13-12
Replacement	13-13
Transmission Assembly	
Removal	
'91-'92 Models	13-4
'93-'95 Models	13-14
Detection of Secondary Cover	
('94-'95 Models)	13-2
Detection of Secondary Spring	
('94-'95 Models)	13-2
Illustrated Index	
5-Speed	13-18
6-Speed ('94-'95 Models)	13-20

Transmission Cover	
Removal	13-22
5th Gear ('91-'93 Models)	
Removal	13-11
5th/6th Gear ('94-'95 Models)	
Removal	13-23
Transmission Housing	
Removal	13-24
Mainshaft , Countershaft , Reverse Gear Shaft	
Disassembly	13-26
Mainshaft, Countershaft	
Inspection	13-28
Reverse Shift Holder , Shift Fork	
Clearance Inspection	13-30
Change Holder , Shift Fork	
Clearance Inspection	13-32
Synchro Sleeve, Synchro Hub	
Inspection	13-33
Installation	13-33
Synchro Ring, Gear	
Inspection	13-34
Oil Pump	
Clearance Inspection	13-35
Mainshaft Bearing (Clutch Housing)	
Replacement	13-36
Countershaft Oil Seal (Clutch Housing)	
Replacement	13-37
Mainshaft Oil Seal (Clutch Housing)	
Replacement	13-38
Mainshaft/Countershaft	
Reassembly, Clearance Inspection	13-39

Secondary Gear Assembly	
Index	13-44
Extension Shaft	
Removal	13-45
Oil Seal (Secondary Gear)	
Removal	13-45
Oil Seal	
Removal	13-46
Tapered Roller Bearing	
Replacement	13-47
Tapered Roller Bearing Preload	
Adjustment	13-48
Oil Seal	
Installation	13-50
Mainshaft , Countershaft , Reverse Gear Shaft	
Installation	13-52
Transmission Housing	
Reassembly	13-54
Bearing Installation	13-56
5th Gear	
Installation	13-43
5th/6th Gear ('94-'95 Models)	
Installation	13-57
Transmission Cover	
Installation	
'91-'93 Models	13-44
'94-'95 Models	13-58
Transmission Assembly	
Installation	13-60
Gearshift Mechanism	
Overhaul	13-65