

**Driveshafts**

**Special Tools ..... 16-2**

**Driveshafts**

**Removal/Installation ..... 16-3**

**Disassembly ..... 16-4**

**Disassembly/Inspection ..... 16-5**

**Reassembly ..... 16-6**

**Intermediate Shaft**

**Removal/Installation ..... 16-9**

**Disassembly ..... 16-9**

**Disassembly/Inspection ..... 16-11**

**Reassembly ..... 16-12**