

Steering

*: Read [SRS precautions](#) before working in this area

Special Tools	17-2
Component Location Index	17-3
System Description	
Fluid Flow Diagram	17-4
Steering Pump	17-5
Fluid Reservoir/Filter	17-6
Control Valve	17-7
Fluid-lock Unloader System	17-9
Speed Sensor	17-9
Troubleshooting	
General Troubleshooting	
'91 Model	17-12
'92 Model	17-12
'93-'95 Models	17-12
Noise and Vibration	17-15
Fluid Leaks	17-16
Maintenance	
Pump Belt Adjustment	17-17

On-Car Checkers	
Rack Guide Adjustment	17-17
Fluid Replacement	17-18
Pump Pressure Check	17-18
Steering Wheel Rotational Play ..	17-19
Power Assist Check With Car	
Parked	17-20
Assist Check at Road Speed	17-20
Power Steering Speed Sensor	
Replacement	17-21
Steering Wheel	
* Removal	17-22
Disassembly/Inspection	17-23
* Installation	17-24
Steering Column	
* Removal	
'91-'93 Models	17-26
'94-'95 Models	17-26

Inspection	
'91-'93 Models	17-28
'94-'95 Models	17-28
* Installation	
'91-'93 Models	17-29
'94-'95 Models	17-29
Steering Pump	
Replacement	17-31
Pulley Replacement	17-32
Flow Control Valve Inspection	
and Replacement	17-32
Disassembly	17-34
Reassembly	17-38
Steering Gearbox	
Gearbox Removal	17-41
Gearbox Installation	17-43
Valve Body Unit Overhaul	17-45
Steering Gearbox Overhaul	17-50
Ball Joint Boot Replacement	17-65