

# Automatic Climate Control

\*: Read [SRS precautions](#) before working in this area

Illustrated Index .....	22-2
Wiring and Connector	
Locations .....	22-3
Circuit Diagram .....	22-4
*Climate Control Unit	
Removal .....	22-6
Troubleshooting	
Self-diagnosis Circuit	
Check .....	22-8
Function Selection and	
Operation Check ....	22-9
Reference Chart	
'91-'92 Models .....	22-10
'93-'95 Models .....	22-10
Heater-Evaporator	
Illustrated Index .....	22-11
Climate Control Unit	
Input/Output Signals	
'91-'92 Models .....	22-11
'93-'95 Models .....	22-12
Flowchart	
Blower Motor	
'91-'92 Models ...	22-12
'93-'95 Models ...	22-13
Blower Motor Speed	
'91-'92 Models ...	22-18
'93-'95 Models ...	22-20

Recirculation Control Motor	
'91-'92 Models ...	22-20
'93-'95 Models ...	22-22
Mode Control Motor	
'91-'92 Models ...	22-22
'93-'95 Models ...	22-24
Air Mix Control Motor	
'91-'92 Models ...	22-24
'93-'95 Models ...	22-26
Max Cool Motor ('91-'92	
Models) .....	22-26
Evaporator Temperature	
Sensor	
'91-'92 Models ...	22-28
'93-'95 Models ...	22-28
Coolant Temperature	
Sensor ('91-'92	
Models) .....	22-29
Heater Core Temperature	
Sensor ('93-'95	
Models) .....	22-30
In-car Temperature	
Sensor ('91-'92	
Models) .....	22-30
Outside Air Temperature	
Sensor	
'91-'92 Models ...	22-31
'93-'95 Models ...	22-32

Sunlight Sensor	
'91-'92 Models ...	22-32
'93-'95 Models ...	22-34
Power Circuit to A/C Control	
Unit ('91-'92	
Models) .....	22-33
Climate Control Unit ('93-'95	
Models) .....	22-36
A/C System ('93-'95	
Models) .....	22-37
Compressor	
'91-'92 Models ...	22-34
'93-'95 Models ...	22-40
Both Fans ('93-'95	
Models) .....	22-44
Both Fans High Speed	
('93-'95 Models) .	22-50
Both Fans Low Speed	
('93-'95 Models)..	22-56
Mode Control Motor	
Replacement .....	22-58
Test .....	22-58
Air Mix Control Motor	
Replacement .....	22-59
Test .....	22-59
Max Cool Motor ('91-'92 Models)	
Replacement .....	22-44
Test .....	22-44

*Aspirator Fan Motor	
Removal .....	22-61
Test .....	22-61
Heater Core Temperature Sensor	
('93-'95 Models)	
Removal .....	22-62
Test .....	22-62
Coolant Temperature Sensor	
('91-'92 Models)	
Replacement .....	22-47
Test .....	22-47
*In-car Temperature Sensor	
Removal .....	22-63
Test .....	22-63
Outside Air Temperature Sensor	
Removal .....	22-64
Test .....	22-64
Sunlight Sensor	
Removal .....	22-65
Test .....	22-65

NOTE: Components and procedures on pages [21-54](#) to [21-80](#) are common to the Automatic Climate Control System.